TELE2

Upute za uporabu

User manual

HR

Jamstveni list

GB

User manual

Tele2fon f1

CE 0682

TELE2

HR

Upute za uporabu

Tele2fon f1

CE 0682

Sadržaj

Prikaz mobilnog telefona 6
1. Predgovor.....7
2. Brzi početak 10
2.1 Objašnjenja simbola 10
2.2 Upoznavanje s tipkama 11
2.3 Umetanje SIM kartice 12
2.4 Umetanje memorijske kartice 12
2.5 Umetanje baterije 13
2.6 Punjenje baterije 13
2.7 Uključivanje i isključivanje telefona 14
3. Funkcije poziva 15
3.1 Upućivanje poziva 15
3.2 Primanje poziva 16
3.3 Izbornik poziva 16
4. Poruke 18
4.1 Pisanje poruke 18
4.2 Primljene poruke 19
4.3 Nedovršeno 20
4.4 Odlazne poruke 21
4.5 Poslane poruke 21
4.6 Izbrisati poruke 21
4.7 Mrežne poruke 21
4.8 Postavke poruka 21
5. Imenik 24
5.1 Brzo traženje 24
5.3 Dodaj novi kontakt 25

6. Pozivi 26
6.1 Povijest poziva 26
6.2 Postavke poziva 27
7. Postavke 30
7.1 Postavke telefona..... 30
7.2 Korisnički profili 32
7.3 Mrežne postavke 33
7.4 Postavke zaštite 33
7.5 Povezivost..... 35
7.6 Vrati tvorničke postavke 36
7.7 Zvučni efekti 36
8. Multimedijski sadržaji 37
8.2 Preglednik slika 38
8.3 Videokamera 38
8.4 Preglednik videa..... 39
8.5 Svirač glazbe..... 40
8.6 Snimač zvuka..... 41
8.7 FM radio 41
9. Upravitelj datoteka 44
10. Organizator 45
10.1 Svjetiljka 45
10.2 Alarm 45
10.3 Kalkulator 46
10.4 Kalendar..... 46
10.5 Štoperica..... 47
10.6 Svjetski sat 47
10.7 Pretvarač valuta 47

11. Usluge 48
11.1 Početna stranica 48
11.2 Favoriti 48
11.3 Upisati adresu 48
11.4 Nedavne stranice 48
11.5 Postavke 49
12. Zabava i igre 50
13. Način unosa 51
14. Održavanje telefona 52
15. Dodatna oprema 54
16. Ekološke napomene 55
17. Tehnički podaci 56

Prikaz mobilnog telefona

1. Predgovor

Poštovani korisniče mobilnog telefona, hvala Vam što ste odabrali naš mobilni telefon!
Naši mobilni telefoni sukladni su s kineskim i europskim telekomunikacijskim standardima i odobreni su za rad na GSM mrežama.
Telefon možete upotrebljavati širom svijeta ovisno o roaming ugovorima s davateljem usluga.
Da biste mogli upotrebljavati ovaj telefon, morate se pretplatiti na GSM uslugu kod davatelja GSM usluga. Ovaj uređaj podržava brojne funkcije i mogućnosti ali njihovo funkcioniranje ovisi o mogućnostima dostupnim na GSM mreži koju koristite. Za dodatne informacije javite se svojemu davatelju usluga.
Preporučujemo Vam da pozorno pročitate ovaj priručnik prije nego što počnete upotrebljavati svoj telefon kako biste telefon održavali u najboljem stanju te ga učinkovito i sa zadovoljstvom upotrebljavali.

Sigurnost

Nemojte pokušavati rastaviti svoj telefon. Sami ste odgovorni za način i posljedice upotrebe telefona.
Općenito je pravilo da uvijek isključite mobilni telefon kada i gdje je njegova upotreba zabranjena.
Upotreba telefona podliježe mjerama sigurnosti predviđenima za zaštitu korisnika i njihove okoline.
Nemojte upotrebljavati telefon u važnim područjima (kupaonica, bazen,…). Zaštitite ga od tekućina i vlage.
Telefon nemojte izlagati ekstremnim temperaturama, nižim od -10°C i višim od +55°C.
Fizikalno-kemijski procesi koje stvaraju punjači postavljaju temperaturna ograničenja pri punjenju baterije. Telefon

automatski štiti bateriju pri ekstremnim temperaturama.
Ne ostavljajte telefon nadohvat male djece (neki uklonjivi dijelovi mogu se slučajno progutati).
Električna sigurnost
Upotrebljavajte samo one punjače koji su navedeni u katalogu proizvođača. Upotreba bilo kojeg drugog punjača može biti opasna i time ćete poništiti jamstvo. Napon napajanja mora točno odgovarati onom koji je naveden na serijskoj pločici punjača.
Sigurnost u zrakoplovu
Pri putovanju zrakoplovom isključite telefon kada za to dobijete upute zrakoplovnog osoblja ili putem znakova upozorenja.
Upotreba mobilnog telefona može biti opasna za let zrakoplova i uzrokovati smetnje u telefonskoj mreži.
Njegova je upotreba ilegalna i možete kazneno odgovarati ili vam se može zabraniti korištenje mobilnih mreža u budućnosti ako ne poštujete ove propise.
Eksplozivni materijali
Poštujte znakove upozorenja na benzinskim crpkama koji od vas traže da isključite telefon. Trebate poštovati ograničenje u upotrebi radijske opreme na mjestima kao što su kemijska postrojenja, odlagališta goriva te na bilo kojem mjestu na kojemu se izvodi miniranje.
Elektronička oprema
Kako biste izbjegli opasnost od demagnetizacije, nemojte dugo držati elektroničke uređaje blizu telefona.
Elektronička medicinska oprema
Vaš je telefon radijski odašiljač koji može ometati rad elektroničke medicinske opreme ili usadaka kao što su slušna pomagala, srčani stimulatori, inzulinske crpke itd. Preporučena minimalna udaljenost između telefona i

usadka je 15 cm. Vaš liječnik ili proizvođač te opreme dat će vam bilo koji potreban savjet po tom pitanju.

Bolnice

Uvijek isključite telefon u bolnicama kada vas na to upozori znak ili medicinsko osoblje.

Sigurnost u prometu

Nemojte upotrebljavati telefon tijekom vožnje. Kako biste se u potpunosti mogli posvetiti vožnji, zaustavite se i sigurno parkirajte prije upućivanja poziva. Morate poštovati sve važeće zakone.

Udaljenost u radu

Ovaj model telefona ispitan je i zadovoljava smjernice o izloženosti radiofrekvencijskom zračenju ako se koristi na sljedeći način:

·Na uhu: upućujte ili primajte telefonske pozive i držite mobilni telefon kao što biste držali žični.

·Nošenje uz tijelo: telefon, kada ima signala, postavite u torbicu za nošenje koja ne sadrži metale, a postavite ga na udaljenosti barem 2,5 cm od tijela. Upotreba druge opreme neće osigurati sukladnost sa smjernicama za izlaganje radiofrekvencijskom zračenju. Ako ne upotrebljavate torbicu pričvršćenu uz tijelo i ne držite telefon uz uho, postavite ga na barem 2,5 cm udaljenosti od tijela,

·Rad s podacima: pri korištenju podatkovne funkcije, telefon postavite na udaljenosti barem 2,5 cm od tijela i držite ga tako tijekom cijelog trajanja prijenosa podataka.

2. Brzi početak

2.1 Objašnjenja simbola

Simbol	Opis funkcije
	Jačina mrežnog signala: više crtica znači jači signal;
	Oznaka mreže SIM kartice
	**Kapacitet baterije** više crtica znači puniju bateriju;
	SMS SIM ima nepročitanih SMS poruka
	Propušten poziv SIM ima propuštenih poziva
 	**Upotreba profila** Svaki profil označen je različitim simbolom: Općenito, Nečujno, Sastanak, Vani
	Slušalice Slušalice su priključene

	Alarm Alarm je uključen
	Štoperica Štoperica je uključena
	Zaključavanje tipkovnice Označava da je tipkovnica zaključana

2.2 Upoznavanje s tipkama

1. Lijeva/Desna softverska tipka: Pripadajuće funkcije prikazane su u donjem lijevom/desnom kutu zaslona.
2.Zelena tipka: Pritisnite nakon upisivanja broja za upućivanje poziva. Pritisnite za javljanje na dolazni poziv. Pritisnite u stanju čekanja za otvaranje popisa poziva.
3. Crvena tipka: Dugo pritisnite za uključivanje/isključivanje telefona; Pritisnite za završetak, odbijanje poziva; ili za izlazak iz izbornika.
4. Tipka OK: Potvrda ili prihvaćanje odabira u izborniku. Pritisnite u stanju čekanja za odabir funkcije prečaca.
5. Navigacijske tipke: Pritisnite gore/dolje/lijevo/desno u izbornicima za pomicanje, pretraživanje ili za pomicanje pokazivača na stranici za uređivanje. U stanju čekanja, pritisnite gore/dolje/lijevo/desno za odabir funkcije prečaca prikazane na dnu zaslona, a zatim pritisnite tipku OK za

potvrdu.

6. Alfanumeričke tipke 0-9: Pritisnite odgovarajuću tipku za upisivanje brojki pri upućivanju poziva ili brojki i slova pri uređivanju i pisanju teksta.

7.Tipka*(zvjezdica): Pritisnite u stanju čekanja za upisivanje

znaka "*"; dugo pritisnite u stanju čekanja za upisivanje +/P/W. U stanju čekanja, pritisnite lijevu softversku tipku, a zatim pritisnite tipku * za zaključavanje ili otključavanje tipkovnice.

8. Tipka #: Pritisnite u stanju čekanja za upisivanje znaka "#"; dugo pritisnite u stanju čekanja za uključivanje ili isključivanje nečujnog načina rada

2.3 Umetanje SIM kartice

Ovaj telefon podržava dvije GSM SIM kartice. Pronađite ležište SIM kartice na stražnjoj strani telefona pa je do kraja gurnite u nj. Tijekom umetanja SIM kartice pazite da čip bude okrenut prema dolje i vodite računa o usmjerenju utora.

Napomene:

1. SIM kartice držite izvan dohvata djece.

2.Ogrebotine i savijanje mogu lako oštetiti SIM karticu zato budite posebno oprezni pri umetanju, vađenju i spremanju SIM kartice.

3.Isključite telefon i izvadite bateriju prije uklanjanja SIM kartice.

2.4 Umetanje memorijske kartice

1. Najprije isključite telefon i uklonite bateriju.
2. Gurnite metalni držač kartice prema dnu telefona i podignite otpušteni kraj držača.
3. Postavite memorijsku karticu u držač tako da su metalni

kontakti okrenuti prema dolje i gurnite držač dok ne sjedne na svoje mjesto.

Napomene:

1.Da biste izbjegli oštećivanje memorijske kartice, nemojte brzo i često umetati i vaditi memorijsku karticu.

2. Redovito izrađujte sigurnosnu kopiju podataka na karticama i drugoj opremi kada koristite kartice kao što je T-flash! Nepravilna uporaba ili drugi čimbenici nesigurnosti mogu uzrokovati oštećivanje ili gubitak sadržaja na karticama.

2.5 Umetanje baterije

Poravnajte čip baterije s metalnim izbočenim dijelom na kućištu baterije, umetnite bateriju i gurajte njen vrh prema dolje u skladu sa smjerom strelice, dok ne sjedne u kućište. Gurajte stražnji kraj poklopca baterije dok ne sjedne na mjesto.

2.6 Punjenje baterije

Otvorite meku gumu otpornu na prašinu priključka na dnu telefona; ukopčajte jedan kraj punjača, tj. utikač punjača u priključak, a drugi kraj u električnu utičnicu. Na zaslonu će biti prikazan simbol punjenja. Po dovršetku punjenja samo izvucite utikač.

Napomene:

1. Upotrebljavajte standardne baterije i punjače kako biste izbjegli opasnost od eksplozije.

2. Ako je baterija potpuno ispražnjena, simbol punjenja baterije trebao bi se pojaviti nakon 2 do 3 minute. Općenito, ovisno o trenutnom stanju telefona (je li uključen, u pozivu, itd.), punjenje traje od 2 do 5 sati.

3. Kad god je to moguće, za punjenje telefona

upotrebljavajte punjač umjesto USB kabela.

4. Optimalnu učinkovitost baterija će postići nakon dva do tri ciklusa punjenja i pražnjenja. Novu bateriju prvi put punite barem 10 sati.

2.7 Uključivanje i isključivanje telefona

Dugo pritisnite **crvenu tipku** za uključivanje ili isključivanje telefona.

1. Ako nema SIM kartice, ako je pokvarena ili ima slab kontakt, primit ćete odgovarajuću poruku upozorenja nakon uključivanja telefona; isključite telefon i provjerite SIM karticu te je li ispravno umetnuta.

2. Ako je umetnuta samo jedna GSM SIM kartica u telefon i uključeni su zaporka telefona i PIN kôd SIM kartice, kada uključite telefon, nakon upisivanja PIN koda i zaporke telefona, telefon će ući u stanje čekanja s trenutnom SIM karticom.

3. Ako su umetnute dvije GSM SIM kartice i uključeni su zaporka telefona i PIN kodovi, kada uključite telefon, zatražit će se da upišete odgovarajuće kodove jedan po jedan. Nakon što se uključi, telefon će automatski tražiti mrežu.

4. Ako telefon pronađe ovlaštenu mrežu, na zaslonu će biti prikazan naziv mreže i jačina signala; Ako ne pronađe ovlaštenu mrežu, telefon će moći upućivati samo hitne pozive ili upotrebljavati nekomunikacijske funkcije.

3. Funkcije poziva

3.1 Upućivanje poziva

1. Izravno biranje

U stanju čekanja, pritisnite odgovarajuće brojčane tipke za upisivanje telefonskog broja koji želite nazvati, uključujući predbroj. Kratko pritisnite Desnu softversku tipku [Obriši] za brisanje jednog znaka, a dugo pritisnite za brisanje svih znakova. Ako je umetnuta samo jedna SIM kartica, pritisnite Zelenu tipku za upućivanje poziva.

2. Upućivanje međunarodnog poziva:

Za upućivanje međunarodnog poziva, dugo pritisnite tipku * dok se simbol "+" što je prefiks za međunarodni poziva na pojavi na zaslonu.

3. Biranje iz telefonskog imenika

Uđite u telefonski imenik preko izbornika te se pomaknite na željeni kontakt koristeći se tipkama gore/dolje, ili pritisnite prvo slovo imena željenog kontakta spremljenog u imenik za brzi pristup imenima koja počinju tim slovom, a zatim se pomaknite na željeni kontakt i pritisnite zelenu tipku za upućivanje poziva.

4. Biranje s popisa poziva

Uđite u Pozive (pritisnite Zelenu tipku u stanju čekanja ili putem izbornika), navigacijskim tipkama pomaknite se na željeni kontakt te pritisnite zelenu tipku za upućivanje poziva.

5. Upućivanje hitnog poziva

Hitni poziv možete uputiti izravno bez SIM kartice. Različite mreže koriste različite brojeve za hitne pozive pa za detalje upitajte svojega operatora.

3.2 Primanje poziva

Kad primite dolazni poziv, telefon će dati odgovarajuće upozorenje, a ako vaša mreža podržava funkciju prikaza broja pozivatelja, na zaslonu će biti prikazano ime ili broj pozivatelja (ovisno o tome je li pozivatelj spremljen u vaš telefonski imenik).

1. Pritisnite zelenu tipku ili pritisnite Lijevu softversku tipku i potvrdite [opcije] za javljanje na dolazni poziv.
2. Ako je funkcija [Pozivi/Postavke poziva/Napredne postavke/Način javljanja] postavljena na [Bilo koja tipka], pritisnite bilo koju tipku osim Desne softverske tipke ili Crvene tipke za javljanje na dolazni poziv.
3. Ako se ne želite javiti na dolazni poziv, pritisnite Crvenu tipku ili Desnu softversku tipku [Odbij] za odbijanje poziva. Možete i pritisnuti Crvenu tipku za završetak poziva.
4. Tijekom poziva, možete pritisnuti gornju/donju navigacijsku tipku za prilagodbu glasnoće.

3.3 Izbornik poziva

Tijekom poziva, pritiskom na desnu softversku tipku možete uključiti/isključiti zvučnik (funkcija spikerfona), pritiskom na lijevu softversku tipku ulazite u opcije:

- Zamijeni*: služi za prebacivanje između poziva

- Konferencija*:tijekom konferencijskog poziva, možete se javiti na poziv na čekanju, dodati pozivatelja u konferenciju; izdvojiti sudionika u privatni razgovor, a ostale staviti na čekanje; staviti sudionike na čekanje; završiti trenutni poziv i sve pozive.

- Na čekanje/Preuzmi jedan poziv*: Trenutni poziv stavlja na čekanje ili preuzima poziv

- **Završi jedan poziv*:** završava trenutni poziv.

- Završi sve pozive*: završava trenutni poziv i poziv na čekanju

- Prijenos*: ovu funkciju mora podržavati mreža.
- **Novi poziv:** ulazak u sučelje za biranje.
- Telefonski imenik: ulazak u sučelje imenika.
- Poruke: pristup izborniku poruka.
- Povijest poziva: pristup popisu poziva.
- Snimač zvuka: snimanje trenutnog poziva.

Napomena:

Snimanje telefonskih razgovora u nekim je državama ilegalno. Stoga, prije snimanja telefonskog razgovora trebate tražiti pristanak druge strane.

- Mikrofon isključen: isključivanje ili uključivanje mikrofona tijekom poziva (ako je mikrofon isključen, druga strana vas ne čuje).

-**DTMF:**slanje DTMF tonova (tijekom poziva, pritiskom na tipke šalju se odgovarajući zvučni signali koji služe za potrebe telefonskog bankarstva, rad s automatskom telefonskom tajnicom, itd.)

Napomena:

***Ove stavke pojavljuju se u izbornicima samo u specifičnim situacijama.**

Primjerice: [Zamijeni] se pojavljuje samo ako postoji aktivni poziv i poziv na čekanju. Također, konferencijski poziv mora podržavati vaš davatelj usluga i vaša pretplata.

4. Poruke

Usluga poruka ovisi o mreži, a omogućava slanje, primanje i uređivanje raznih vrsta poruka. Dodatne informacije zatražite od mrežnog operatora.

4.1 Pisanje poruke

4.1.1 SMS poruka

Uredite, spremite ili pošaljite SMS poruku primatelju.

Napomena:

Da biste mogli slati SMS poruke, trebate podesiti ispravan broj SMS centra koji možete dobiti od svojega mrežnog operatora.

Tijekom uređivanja, pritisnite tipku # za promjenu načina unosa. SMS poruka može sadržavati do 612 znakova.

Pritisnite tipku OK za ulazak u sučelje primatelja gdje možete upisati telefonski broj ili dodati broj iz imenika. Možete dodati jedan ili više brojeva. Pritisnite Lijevu softversku tipku [Opcije] za odabir opcija prilikom uređivanja:

- Pošalji: upisivanje telefonskog broja, ili pritisnite <potvrdi> za traženje broja u imeniku, odabir vrste SIM kartice i, nakon potvrde, slanje poruke.

- **Uredi primatelja:** uređivanje primateljevog broja.

- Ukloni primatelja: uklanjanje jednog primatelja.

- Ukloni sve primatelje: uklanjanje svih primatelja

- Spremi u Nedovršeno: spremanje poruka u mapu Nedovršeno

4.1.2 MMS poruka

Usluga razmjene MMS poruka omogućava korisnicima mobilnih telefona slanje i primanje multimedijskih poruka. MMS poruke mogu sadržavati tekst, slike, animacije i glazbene sadržaje.

Napomena:
Ova funkcija može se koristiti samo ako je podržava mrežni operator. MMS poruke mogu primati i ispravno prikazati samo mobilni telefoni koji podržavaju MMS.

U sučelju za uređivanje, pritisnite lijevu softversku tipku za opcije:

-Šalji na: možete upisati broj ili ga dodati iz imenika, možete dodati jedan ili više brojeva, nakon uređivanja broja, možete i ukloniti broj, promijeniti u Cc ili Bcc.

-Način unosa: možete odabrati način unosa ili umetnuti simbol.

-Dodaj sliku: umetanje slike iz telefona ili s memorijske kartice u MMS.

-Opcije slike*: uklanjanje trenutne slike.

-Dodaj zvuk: umetanje audiodatoteke iz telefona ili memorijska kartice u MMS.

-Opcije zvuka*: uklanjanje trenutnog zvuka

-Dodaj video: umetanje videodatoteke iz telefona ili memorijske kartice u MMS.

-Opcije videa*: uklanjanje trenutnog videa

-Dodaj predmet:upisivanje predmeta MMS poruke

-Pregled MMS-a: Pregledavanje stranica.

-Opcije slajda: dodavanje stranica i podešavanje vremena slajda.

-Napredno: dodavanje privitka ili umetanje web adrese

-Spremi u Nedovršeno: Spremanje MMS-a u [Nedovršeno], ponovno uređivanje i slanje.

4.2 Primljene poruke

Primljene SMS/MMS poruke mogu se spremiti u telefon ili SIM memoriju, a ovdje im se može pristupiti. Kada primite poruku, upozorit će vas zvuk ili vibriranje i na

zaslonu će biti prikazan simbol poruke. Pritisnite Lijevu softversku tipku [Čitanje] ili tipku OK za čitanje poruke, pritisnite Desnu softversku tipku [Natrag] za povratak, a možete i pristupiti primljenim porukama da biste pročitali novu poruku.
Ako je memorija poruka puna, pojavljuje se obavijest “Memorija puna” i simbol poruke treperi na zaslonu. Da biste mogli primati nove poruke, izbrišite neke stare poruke u mapi primljenih poruka. Ako je veličina novih poruka veća od kapaciteta mape primljenih poruka, podaci će biti izgubljeni i nepotpuni.
U popisu poruka, pritisnite tipku OK za čitanje odabrane poruke, pritisnite Lijevu softversku tipku [Opcije] za sljedeći izbornik:
-Prikaži: prikaz trenutne poruke
-Odgovori SMS-om: izravan odgovor pošiljatelju SMS porukom.
-Odgovori MMS-om: izravan odgovor pošiljatelju MMS porukom.
-Nazovi pošiljatelja: upućivanje poziva na broj pošiljatelja
-Naprijed: prosljeđivanje trenutne poruke na drugi broj.
-Izbriši: brisanje poruka.
-Izbriši sve: brisanje svih poruka u mapi primljene poruke.
-Spremi u imenik: spremanje informacija o primateljevu broju u telefonski imenik.

4.3 Nedovršeno
SMS i MMS poruke koje još nisu dovršene bit će spremljene u ovu mapu, a s njome se radi na isti način kao s mapom primljenih poruka

4.4 Odlazne poruke

SMS i MMS poruke koje nisu uspjele biti poslane bit će spremljene u ovu mapu, a s njome se radi na isti način kao s mapom primljenih poruka.

4.5 Poslane poruke

SMS ili MMS koje su uspješno poslane spremaju se u ovu mapu. Za automatsko spremanje poruka morate odabrati [Postavke poruka →SMS poruka →Postavke poruka →Zajedničke postavke→Spremi poslanu poruku], druge radnje obavljaju se na isti način kao i s mapom primljenih poruka.

4.6 Izbrisati poruke

Ova funkcija omogućava brisanje pojedinačnih poruka ili svih informacija u mapi.

4.7 Mrežne poruke

Mrežne poruke šalju mrežni operatori a sadrže lokalne informacije i za njihovo funkcioniranje potrebna je podrška mrežnog operatora od kojega možete dobiti dodatne informacije. Usluga mrežnih poruka omogućava vam da od mrežnog operatora primate razne informacije primjerice o vremenskoj prognozi, taksi službi, bolnicama i slično. Informacije o dostupnosti usluge zatražite od lokalnog mrežnog operatora.

4.8 Postavke poruka

4.8.1 SMS poruke

Postavke profila: možete odabrati neki od dva načina, prilagoditi različite parametre, uključujući broj centra

poruka, razdoblje valjanosti i vrstu poruke.
Poslužitelj govorne pošte: Kada se ne možete javiti na telefon, dolazne pozive možete automatski preusmjeriti na svoju govornu poštu, pozivatelj može čuti vašu govornu poruku, a njegova poruka sprema se na mrežni sustav za govornu poštu te poslije možete pristupiti sustavu govorne pošte i preslušati poruku.
U podizborniku govorne pošte možete vidjeti trenutnu govornu poruku.
Funkcija govorne pošte treba podršku mrežnog operatora, a možda ćete se morati i pretplatiti na uslugu. Pojedinosti zatražite kod mrežnog operatora.
Zajedničke postavke:
Izvještaj o isporuci: ako je ova funkcija uključena, nakon uspješnog slanja SMS poruke, sustav će vam poslati izvještaj.
Putanja odgovora: ako to mreža dopušta, kad uključite ovu funkciju primatelj prima SMS poruku i sustav šalje potvrdnu poruku.
Spremi poslanu poruku: ako je ova funkcija uključena, nakon uspješnog slanja SMS poruka automatski će biti spremljena u Poslane poruke.
Stanje memorije: prikaz stanje memorije za pohranu.
Preferirana pohrana: možete odabrati da se poruke prioritetno spremaju na SIM karticu ili na mobilni telefon.
Preferirana veza: možete odabrati preferiranu vezu: GPRS ili GSM.
4.8.2 MMS poruka
Podatkovni račun: Postavke računa za internetski pristup.
Zajedničke postavke:

Sastavljanje: u ovom izborniku možete podesiti vrijeme slajda, način izrade i odrediti postavke potpisa.

Slanje

Izvještaj o isporuci: ako je odabrano [Uključeno], kada primatelj primi i preuzme poruku, mreža će poslati poruku da vas obavijesti (ovisi o mrežnoj podršci); možete odabrati i [Isključeno]

Izvještaj o čitanju: ako je odabrano [Uključeno], kada primatelj pročita MMS, možete odabrati da pročitate izvještaj poslan vama (potrebna je mrežna podrška), možete odabrati i [Isključeno].

Prioritet: Postavke prioriteta za MMS.

Vrijeme isporuke: možete podesiti vrijeme isporuke odmah\1 sat poslije\12 sati poslije\24 sata poslije.

Pošalji i spremi: ako je ova funkcija aktivna, nakon uspješnog slanja MMS poruka automatski će biti spremljena u Odlazne poruke.

Dohvaćanje: u ovom izborniku možete odabrati Domaća mreža\Roaming\Filtri\Izvještaj o čitanju\Izvještaj o isporuci

Preferirana pohrana: možete odabrati preferiranu pohranu na telefon ili memorijsku karticu.

Stanje memorije: možete odabrati telefon ili memorijsku karticu da biste vidjeli zauzetost memorije.

4.8.3 Push poruke

Omogući push: možete odabrati prihvaćanje svih push poruka ili onemogućiti.

Omogući usluge: možete odabrati upit, automatsko pokretanje ili onemogući.

5. Imenik

Ovaj telefon odlikuje se dobro organiziranim i velikim prostorom za pohranu. Možete koristiti funkcije kontakata za spremanje imena, broja i zvuka zvona za svoje kontakte. U telefonski imenik može se spremiti 500 zapisa, a broj zapisa u imeniku SIM kartice ovisi o kapacitetu SIM kartice.

5.1 Brzo traženje

Telefon nudi mogućnost brzog traženja željenog kontakta spremljenog u telefonski imenik.

U sučelju popisa kontakata, pritisnite tipku # za prebacivanje načina unosa, upišite prvo slovo imena kontakta da biste došli do kontakata čije ime počinje tim slovom.

Nakon što pronađete željeni kontakt, pritisnite Zelenu tipku za upućivanje poziva, a Crvenu tipku za završetak poziva.

5.2 Pretraživanje kontakata

Na zaslonu popisa kontakata u imeniku, pritisnite navigacijsku tipku gore/dolje za traženje željenog kontakta, pritisnite zelenu tipku za upućivanje poziva, a crvenu tipku za završetak poziva. Pritisnite tipku OK za prikaz detalja odabranog kontakta. Na popisu kontakata u imeniku, označite željeni kontakt i pritisnite lijevu softversku tipku za sljedeće mogućnosti:

- Prikaži: prikaz odabranog kontakta

- Pošalji SMS poruku: slanje SMS poruke na odabrani broj

-Pošalji MMS poruku: slanje MMS poruke na odabrani broj.

- Poziv: upućivanje poziva na odabrani broj

- **Uredi:** uređivanje odabranog kontakta
- Izbriši: brisanje odabranog kontakta
- Kopiraj: kopiranje kontakta na “SIM” ili “telefon”
- Premjesti: premještanje kontakta sa SIM kartice na telefon ili s telefona na SIM karticu
- Dodaj na crni popis: dodavanje kontakta na crni popis.
- Postavke imenika:

Brzo biranje: Dodajte broj na popis za brzo biranje. Podesite funkciju brzog biranja, u stanju čekanja pritisnite odgovarajuću brojčanu tipku i možete izravno nazvati broj koji je dodijeljen tom mjestu na popisu za brzo biranje.

Dodatni brojevi: postavljanje vlastitog broja telefona Stanje memorije: prikaz stanja memorije za "SIM" i "telefon"

Kopiraj kontakte: kopiranje svih kontakata s telefona na SIM karticu ili sa SIM kartice na telefon.

Premjesti kontakte: premještanje svih kontakata s telefona na SIM karticu ili sa SIM kartice na telefon

Izbriši sve kontakte: brisanje svih kontakata na SIM kartici ili na telefonu

5.3 Dodaj novi kontakt

-SIM: novi zapisi dodani na SIM, za svako ime može se spremiti samo po jedan broj.

-Telefon: možete dodati ime, broj i zvuk zvona za taj kontakt. Ovi zapisi spremljeni su u telefon.

6. Pozivi

Ovaj telefon može spremiti sve dolazne, odlazne i propuštene poziva kao i vremena poziva. Samo kada odgovarajuću funkciju podržava mreža i telefon je uključen i u dosegu mrežnog signala, telefon može spremiti dolazne i propuštene pozive. Zapisima poziva može se pristupiti pritiskom na Zelenu tipku u stanju čekanja ili putem izbornika.

Pristupite izborniku Pozivi putem izbornika i pojavit će se sljedeći podizbornici:

6.1 Povijest poziva

Propušteni/Odlazni/Dolazni pozivi

Prikaz popisa propuštenih/odlaznih/dolaznih poziva.

Na popisu poziva, pritisnite Zelenu tipku za upućivanje poziva; pritisnite tipku OK za prikaz detalja trenutnog zapisa; pritisnite lijevu softversku tipku za sljedeće:

- Prikaži: prikaz detalja trenutnog zapisa poziva.

- Poziva: nazivanje broja s popisa poziva.

- Pošalji SMS poruku: slanje SMS poruke na označeni broj

-Pošalji MMS poruku: slanje MMS poruke na označeni broj.

- Spremi u imenik: spremanje broja u imenik.

- Dodaj na crni popis: određivanje da se ne javite na poziv s tog broja, broj možete staviti na crni popis putem izbornika [Pozivi →Postavke poziva →Napredne postavke →Crni popis]

- Uredi prije poziva: uređivanje broja prije poziva

- Izbriši: brisanje trenutnog broja s popis poziva.

Izbriši dnevnike poziva

Brisanje dnevnika poziva ili svih povijesti poziva.

Trajanje poziva

Prikaz trajanja zadnjeg poziva\odlaznih poziva\dolaznih poziva, a zapise trajanja poziva možete resetirati ali morate upisati zaporku telefona (162991).

Brojilo SMS poruka

Prikaz broja SIM poslanih i primljenih poruka.

GPRS brojilo

Prikaz količine podataka prenesenih preko mreže.

6.2 Postavke poziva

SIM postavke poziva

Poziv na čekanju:

Možete aktivirati, deaktivirati ili provjeriti status ove funkcije.

Ako je ova funkcija aktivna, ako tijekom poziva primite drugi dolazni poziv, telefon će se oglasiti zvučnim signalom i na zaslonu će biti prikazan broj ili ime pozivatelja i informacija o pozivu na čekanju.

Preusmjerenje poziva:

Ova funkcija omogućava preusmjeravanje telefonskih poziva na govornu poštu ili neki drugi broj koji odredite. Za ovu funkciju potrebna je podrška mrežnog operatora koji vam može dati više informacija.

Preusmjeravanje poziva moguće je pod nekoliko različitih uvjeta i za svaki od njih se preusmjeravanje može aktivirati, deaktivirati ili provjeriti status. Prilikom aktiviranja funkcije, od vas će se zatražiti da upišete broj na koji se pozivi preusmjeravaju, a mogućnosti su sljedeće:

Svi govorni pozivi: preusmjeravanje svih govornih poziva na odabrani broj ili govornu poštu

Kod nedostupnosti: kada je telefon isključen ili nema mrežnog signala, dolazni pozivi preusmjeravaju se na

odabrani broj ili govornu poštu

Kod nejavljanja: ako se ne javite, dolazni pozivi preusmjeravaju se na odabrani broj ili govornu poštu

Kod zauzetosti: ako ste zauzeti, dolazni pozivi preusmjeravaju se na odabrani broj ili govornu poštu

Svi podatkovni pozivi: preusmjeravanje svih podatkovnih poziva na odabrani broj, a za ovu funkciju potrebna je podrška mrežnog operatora koji vam može dati više informacija.

Otkaži sva preusmjeravanja: otkazivanje svih vrsta preusmjeravanja poziva.

Zabrana poziva:

Postavljanje ograničenja za dolazne i odlazne pozive. Od mrežnog operatora zatražite informacije o podršci za ovu funkciju i zaporku da biste mogli postavljati ograničenja poziva.

Zabrane poziva mogu se aktivirati, deaktivirati ili se može provjeriti njihov status

Prebacivanje linije:

Može se prebaciti na Liniju 1 ili Liniju 2, Linija 1 je zadana, a ako odaberete liniju 2, tada možda neće biti telefonskih poziva.

Napredne postavke

Crni popis:

Možete uključiti ili isključiti ovu funkciju i urediti brojeve na crnom popisu, a na popisu može biti do 20 brojeva. Ako je ova funkcija aktivna, pozivi brojeva s crnog popisa bit će automatski odbijeni.

Autom. ponovno biranje:

Možete omogućiti ili onemogućiti ovu funkciju. Kad je ova funkcija uključena, ako se osoba koju zovete ne javlja tijekom nekog vremena automatski će se ponovno birati

taj broj. Broj ponovnih biranja je do 10 puta, a tijekom toga perioda, ne možete nazvati drugi broj. Za završetak automatskog ponovnog biranja, pritisnite desnu softversku tipku.

Podsjetnik o trajanju poziva:može se postaviti

Isključeno: tijekom poziva ne čuje se zvučni signal podsjetnika o trajanju poziva.

Jednom: odaberite da se tijekom poziva telefon jednom oglasi zvučnim signalom nakon zadanog vremena, a to vrijeme može biti 1-3000 sekunda.

Periodički: odaberite da se tijekom poziva telefon periodički oglašava zvučnim signalom nakon zadanog vremena, a to vrijeme može biti 30-60 sekunda.

Autom. brzi završetak:

Automatsko ograničavanje vremena trajanja poziva. Kad je ova funkcija uključena, telefonski razgovor automatski će biti završen nakon isteka zadanog vremena

Način javljanja:

Bilo koja tipka: ako je odabrana ova mogućnost, na dolazni poziv možete se javiti pritiskom na bilo koju tipku osim crvene tipke i desne softverske tipke

Automatski u načinu slušalice:ako je odabrana ova mogućnost, kada je telefon u načinu rada slušalice, na dolazni poziv automatski će se javiti nakon približno 2 sekunde.

Automatsko snimanje:

Možete uključiti ili isključiti ovu funkciju. Ako je uključena, telefon može automatski snimati tijekom poziva.

7. Postavke

7.1 Postavke telefona

Vrijeme i datum

Postavi domaći grad: možete odabrati grad koji odgovara vašoj lokaciji i vremenskoj zoni kao svoj domaći grad

Postavi vrijeme/datum: ovdje podešavate vrijeme i datum na telefonu. Telefon podržava raspon kalendara od 2000. do 2030. godine.

Postavi format: ovdje podešavate format prikaza vremena i datuma

Planirano uključ./isključ.

Možete namjestiti četiri vremena tako da se telefon u zadano vrijeme automatski uključi ili isključi. Pomoću navigacijskih tipki odabirete uključivanje ili isključivanje, odnosno namještate vremena.

Napomena: vremena postavite tako da izbjegnete konflikt jer inače funkcija neće raditi.

Jezik

Ovdje odabirete jezik izbornika telefona.

Preferir. načini unosa

Možete postaviti zadani način unosa.

Postavke zaslona

Pozadina: postavite pozadinsku sliku koja će biti prikazana na zaslonu u stanju čekanja.

Možete odabrati zadanu pozadinu ili možete odabrati

slikovnu datoteku u Upravitelju datoteka.

Čuvar zaslona

Stanje: ovdje možete uključiti ili isključiti funkciju čuvara zaslona

Čekanje: možete odabrati da se čuvar zaslona pokrene nakon 5 s, 15 s, 30 s, 1 minute

Čuvar zaslona: možete odabrati zadani čuvar zaslona sustava ili odabrati neku drugu sliku koja će se koristiti kao čuvar zaslona

Prikaži datum i vrijeme: možete odabrati da se u stanju čekanja prikazuje ili ne prikazuje sat.

Prikaži mrežu: možete uključiti ili isključiti prikaz naziva mreže u stanju čekanja.

Prečaci

U ovom izborniku možete postaviti funkcije koje najčešće upotrebljavate, tako da im možete izravno i brzo pristupiti. Pritisnite lijevu softversku tipku za ulazak u izbornik opcija, navigacijskim tipkama gore/dolje pronađite željenu funkciju, a navigacijskim tipkama lijevo/desno postavite redoslijed.

Namjenska tipka

Možete promijeniti funkciju navigacijskih tipki tako da odgovara prečacu u stanju čekanja.

Zrakoplovni način rada

Ovdje možete odabrati normalni način rada ili zrakoplovni način rada telefona. U normalnom načinu rada možete upotrebljavati sve funkcije telefona, a u zrakoplovnom načinu rada dostupne su samo funkcije koje ne upotrebljavaju radiokomunikaciju. Zrakoplovni način rada namijenjen je za rad telefona u zrakoplovima ili drugim mjestima gdje nije preporučljivo ili se ne smiju upotrebljavati radiokomunikacijski uređaji

Razne postavke

Ovdje možete prilagoditi pozadinsko osvjetljenje zaslona pritiskom na navigacijske tipke lijevo ili desno.

7.2 Korisnički profili

Ovaj telefon nudi pet korisničkih profila: Općenito, Nečujno, Sastanak, Vani i Moj stil. Profili omogućavaju prilagodbu telefona, zvukova i upozorenja različitim događajima i okruženjima.

Sukladno različitim lokacijama odaberite različiti profil, a zatim taj profil prilagodite i aktivirajte.

Napomena: tvornički su postavljene zadane postavke i početni profil je općeniti

Aktiviraj

Aktiviranje odabranog profila.

Prilagodi:

Možete prilagoditi različite efekte sukladno svojim potrebama. Na zaslonu postavki, pritisnite navigacijsku tipku dolje za označavanje stavke koju treba postaviti.

Vrsta upozorenja: Pritisnite navigacijsku tipku lijevo/desno za odabir: samo vibriranje, vibriranje i zvono, vibriranje pa zvono ili samo zvono.

Vrsta zvona: Pritisnite navigacijsku tipku lijevo/desno za odabir: Ponovi, Rastuće, Zvoni jednom

Dolazni poziv: Možete birati između deset ugrađenih zvukova zvona, a putem upravitelja datoteka možete odabrati i omiljenu audiodatoteku kao zvuk zvona.

Glasnoća zvona: Pritisnite navigacijsku tipku lijevo/desno za prilagodbu glasnoće zvona.

Zvuk poruke: Možete odabrati između pet ugrađenih zvukova, a putem upravitelja datoteka možete odabrati i omiljenu audiodatoteku kao zvuk poruke.

Glasnoća poruke: Pritisnite navigacijsku tipku

lijevo/desno za prilagodbu glasnoće zvona.
Tipkovnica: Pritisnite navigacijsku tipku lijevo/desno za odabir klik ili ton.
Glasnoća zvuka tipki: Pritisnite navigacijsku tipku lijevo/desno za prilagodbu glasnoće zvuka tipki.
Upozorenje sustava: Možete odabrati aktiviranje zvuka upozorenja sustava.
Resetiraj
Vraćanje telefona na zadane postavke.
7.3 Mrežne postavke
Možete postaviti na ručni ili automatski odabir mreže. Ako odaberete Automatski, telefon će automatski odabrati mrežu ovisno o postavkama na SIM kartici. Ako odaberete Ručno, moći ćete ručno odabrati mrežnog operatora čiju mrežu možete koristiti sa svojom SIM karticom.
7.4 Postavke zaštite
SIM zaštita
Možete upotrebljavati PIN kôd, PIN2 kôd, postaviti zaporku telefona i funkcije zaštite podataka.
PIN kôd (PIN1) je kôd za zaštitu SIM kartice. Ako korisnik ne promijeni kôd, izvorni kôd je 1234 ili 0000. Ako omogućite PIN kôd, tada ćete prilikom svakog uključivanja telefona morati upisati 4-znamenkasti PIN kôd. PIN kôd možete promijeniti da biste zaštitili svoju SIM karticu od neovlaštene uporabe. Imajte na umu daako tri puta pogrešno upišete PIN kôd, SIM kartica će se automatski zaključati i trebat će vam PUK kôd da biste je otključali.
PUK kôd (PUK1) sastoji se od 8 znamenki i korisnik ga ne može mijenjati. Ako je PIN kôd blokiran i zbog toga SIM kartica zaključana, pripazite prilikom upisivanja PUK koda jer ako 10 puta pogrešno upišete PUK kôd, SIM kartica trajno će se zaključati i bit će neupotrebljiva. PUK kôd za

otključavanje SIM kartice možete dobiti od svojega operatora.
Napomena: Molimo upotrebljavajte ovu fukcionalnost vrlo oprezno, a ako ne znate PUK kôd zatražite ga od svojega mrežnog operatora. Ako 10 puta za redom pogrešno upišete PUK kôd, SIM kartica bit će neupotrebljiva.
PIN zaključavanje
Ovdjemožete omogućiti ili onemogućiti zaključavanje SIM kartice putem PIN koda, a za uključivanje ili isključivanje PIN koda morat ćete upisati ispravan PIN kôd. Ako je ova funkcija aktivna, svaki put prilikom uključivanja telefon će zatražiti da upišete PIN kôd.
Promijeni PIN
Ako je PIN kôd aktivan, ovdje ga možete promijeniti. Najprije ćete morati upisati stari PIN kôd, a zatim dvaput novi PIN kôd i nakon toga vrijedit će novi PIN kôd.
Promijeni PIN2
PIN2 (Personal Identification Number 2) služi za pristup određenim funkcijama (kao što su postavljanje fiksnog biranja, postavljenje tarifiranja poziv itd.) i trebat ćete ga upisati ukoliko želite postaviti te funkcije.
PIN2 kôd daje vam dobavljač SIM kartice i pomoću njega možete aktivirati funkcije povezane s tarifiranjem poziva, prikazom troškova poziva, postavljanjem ograničenja troškova poziva. Sve te funkcije mora podržavati vaš davatelj usluga i stoga dodatne informacije zatražite od svojega mrežnog operatora. Ako tri puta pogrešno upišete PIN2 kôd, on će se zaključati, a da biste ga otključali trebat će vam PUK2 kôd.
Ako je PIN2 kôd zaključan to neće utjecati na normalni rad telefona. Postupak otključavanja PIN2 koda sličan je onomu opisanom u odjeljku u kojem se govori o PIN kodu.

Napomena:
Upotrebljavajte ovu mogućnost vrlo oprezno jer ako 10 puta za redom pogrešno upišete PUK kôd, SIM kartica bit će neupotrebljiva.

Zaključavanje telefona
U ovom izborniku možete postaviti zaporku telefona da biste svoj telefon zaštitili od neovlaštene uporabe
Zaključavanje telefona
Ovdje možete omogućiti ili onemogućiti zaporku telefona, a za uključivanje ili isključivanje zaporke telefona morat ćete upisati ispravnu zaporku telefona. Ako je ova funkcija aktivna, svaki put prilikom uključivanja telefon će zatražiti da upišete zaporku telefona.
Promjena zaporke
Zaporku telefona možete promijeniti. Najprije ćete morati upisati staru zaporku telefona, a zatim dvaput novu zaporku telefona i nakon toga vrijedit će nova zaporka telefona.
Autom. zaključ. tipki
U ovom izborniku možete uključiti automatsko zaključavanje tipkovnice. Ako u stanju čekanja ne upotrebljavate tipkovnicu, ona će se automatski zaključati nakon zadanog vremena. Da biste otključali tipkovnicu, pritisnite tipku #.
Napomena: Ako je tipkovnica zaključana i pozadinsko svjetlo isključeno, kada pritisnete neku tipku zaslon će se osvijetliti i zatim pritisnite lijevu softversku tipku i tipku * za otključavanje

7.5 Povezivost
Podatkovni račun

Možete odabrati internetski podatkovni račun. Možete sami dodavati internetske podatkovne račune.
U internetskom sučelju, pritisnite [Opcije] i na raspolaganju su vam sljedeće mogućnosti:
Uredi: Uređivanje odabranog podatkovnog računa.
Dodaj PS račun: Mobitel podržava maksimalno 6 podatkovnih računa. Za svaki račun moguće je urediti sljedeće podatke: naziv računa, APN, korisničko ime, zaporku, vrstu provjere autentičnosti, odabir SIM kartice, napredne postavke itd.
Izbriši: brisanje odabranog podatkovnog računa
Promijeni zadano: odaberite ovu funkciju da biste vratili zadanu postavku.

7.6 Vrati tvorničke postavke

Resetiranje postavki mobilnog telefona vraća postavke telefona na zadane vrijednosti. Upišite zaporku (početna zaporka je 1234) za vraćanje telefona na tvorničke postavke.

7.7 Zvučni efekti

Ova funkcija omogućava postavljanje ekvalizatora zvuka.

8. Multimedijski sadržaji

8.1 Fotoaparat

Vaš telefon opremljen je fotoaparatom kojim možete fotografirati kad god je moguće. Fotografije možete spremiti u telefon ili prilagoditi pozadinu.

U izborniku multimedijskih sadržaja, odaberite fotoaparat za otvaranje zaslona pregleda, pritisnite odgovarajuće tipke za postavljanje sljedećih mogućnosti fotoaparata:

Pritisnite tipku “1” da namjestite [Veličina slike]

Pritisnite tipku ”2” da namjestite [Kvalitete slike]

Pritisnite tipku ”4” da namjestite [Nijansa bijele boje]

Pritisnite tipku ”6” da namjestite [Odgoda snimanja]

Pritisnite tipku ”7” da namjestite [Višestruke snimke]

Pritisnite tipku OK za snimanje fotografije, pritisnite desnu softversku tipku za povratak, pritisnite lijevu softversku tipku za opcije:

Fotografije: odabirom ove funkcije otvara se preglednik slika.

Postavke fotoaparata: Pritisnite navigacijsku tipku lijevo/desno za prilagodbu opcija uključujući Zvuk zatvarača, EV, Poništenje treperenja, Kontrast, Odgoda snimanja, Višestruke snimke, Scene. Kada završite, pritisnite lijevu softversku tipku ili tipku OK za potvrdu trenutne postavke.

Postavke slike: postavljanje kvalitete i veličine slike.

Nijansa bijele boje: postavljanje balansa bijele boje

Scene: možete odabrati automatski ili noćno.

Postavke efekta: možete namjestiti posebni efekt

Mjesto spremanja: možete odabrati telefon ili memorijsku karticu kao mjesto pohrane

Vrati zadano: ako odaberete i potvrdite ovu funkciju,

parametri fotoaparata vraćaju se na zadane vrijednosti.
Nakon snimanja fotografije, pritisnite tipku natrag za povratak na zaslon pregleda, pritisnite lijevu softversku tipku za opcije, za slanje ili brisanje fotografije

8.2 Preglednik slika

Ova praktična mogućnost služi za pregledavanje fotografija spremljenih u album. Pritisnite tipku OK za otvaranje slike, pritisnite lijevu softversku sliku za otvaranje izbornika opcija:

Prikaži: otvara i prikazuje trenutnu sliku.

Podaci o slici: prikazuje informacije o trenutnoj slici.

Način prikaza: možete odabrati popis i tabelarno.

Pošalji: Možete odabrati slanje slika putem usluge MMS poruka.

Koristi kao: odabrana slika može se upotrijebiti kao pozadinska slika zaslona, čuvar zaslona, slika na zaslonu pri uključivanju telefona, slika na zaslonu pri isključivanju telefona.

Preimenuj: promjena naziva odabrane slike.

Izbriši: brisanje odabrane slike.

Razvrstaj prema: možete razvrstati prema nazivu, vrsti, vremenu, veličini ili ništa od toga

Izbriši sve datoteke: briše sve slikovne datoteke.

Mjesto spremanja: možete odabrati telefon ili memorijsku karticu kao mjesto pohrane

Napomena:

Ako nema slika u pregledniku slika, u izborniku opcija prikazuje se samo način prikaza i mjesto spremanja.

8.3 Videokamera

U izborniku multimedijskih sadržaja, odaberite

videokameru za otvaranje zaslona pregleda videa, Pritisnite navigacijsku tipku lijevo/desno da namjestite [EV], Pritisnite navigacijsku tipku gore/dolje da namjestite [Zoom], pritisnite tipku “2” da namjestite [Kvaliteta videa], pritisnite tipku “3” da namjestite [Noćni način], pritisnite tipku ”4” da namjestite [Nijansa bijele boje], pritisnite lijevu softversku tipku za otvaranje izbornika opcija:

Postavke videokamere: Pritisnite navigacijsku tipku lijevo/desno za prilagodbu opcija uključujući EV, Noćni način, Poništenje treperenja.

Postavke videa: Možete namjestiti kvalitetu slike

Nijansa bijele boje: Možete namjestiti balans bijele boje

Postavke efekta: Možete namjestiti posebni efekt.

Mjesto spremanja: Možete odabrati telefon ili memorijsku karticu kao mjesto pohrane

Vrati zadano: ako odaberete i potvrdite ovu funkciju, parametri videokamere vraćaju se na zadane vrijednosti.

Pritisnite tipku OK za početak snimanja, pritisnite tipku OK za stanku ili nastavak snimanja; Pritisnite desnu softversku tipku za kraj snimanja i na zaslonu će se pojaviti upit želite li spremiti video, pritisnite lijevu softversku tipku za spremanje i povratak na zaslon pregleda videa, pritisnite desnu softversku tipku ako ne želite spremiti video i za povratak na zaslon pregleda.

8.4 Preglednik videa

Zahvaljujući ovoj funkciji možete pregledavati videodatoteke spremljene u odgovarajućem formatu, a podržani su formati 3gp, mp4, Avi.

U izborniku multimedijskih sadržaja, odaberite preglednik videa za otvaranje popisa videa, pritisnite lijevu softversku tipku za otvaranje izbornika opcija:

Pokreni: Pokreće trenutnu videodatoteku

Pošalji: možete poslati video putem MMS poruke.
Preimenuj: promjena naziva odabranog videa.
Izbriši: briše odabrani video.
Izbriši sve datoteke: briše sve videodatoteke.
Razvrstaj prema: možete razvrstati prema nazivu, vrsti, vremenu, veličini ili ništa od toga
Mjesto spremanja: možete odabrati telefon ili memorijsku karticu kao mjesto pohrane

8.5 Svirač glazbe

Preslušavajte audiodatoteke spremljene na telefonu ili memorijskoj kartici.

U sučelju svirača glazbe, pritisnite navigacijsku tipku gore za start/stanku trenutne pjesme, pritisnite navigacijsku tipku dolje za zaustavljanje sviranja, pritisnite navigacijsku tipku lijevo/desno za skok na prethodnu/sljedeću pjesmu; pritisnite tipku */# za prilagodbu glasnoće.

U sučelju svirača glazbe, pritisnite crvenu tipku ili desnu softversku tipku za izlazak iz sučelja svirača, glazba svira u pozadini, a na zaslonu u stanju čekanja prikazan je naziv pjesme.

Pritisnite lijevu softversku tipku za otvaranje popisa naslova, pritisnite lijevu softversku tipku za otvaranje izbornika opcija:

Pokreni: svira trenutnu pjesmu.
Pojedinosti: prikaz informacija o trenutnoj pjesmi, uključujući veličinu i vrijeme pjesme.
Osvježi popis: osvježavanje popisa naslova.
Postavke:

Prefer. popis: Pritisnite navigacijsku tipku lijevo/desno za odabir telefona ili memorijske kartice.

Autom. popis: Ako je ova opcija omogućena, popis

naslova automatski će se ažurirati.
Ponavljanje: Možete odabrati ponavljanje svih pjesama, ponavljanje jedne ili isključeno.
Nasumično: Ako je odabrano uključeno, svirač glazbe svirat će pjesme s popisa slučajnim odabirom.
Pozadinsko izvođenje: Ako je odabrano uključeno, nakon izlaska iz svirača glazbe on će nastaviti svirati u pozadini.
Zvučni efekt: Možete namjestiti zvučni efekt.

8.6 Snimač zvuka

Na zaslonu svirača, pritisnite lijevu softversku tipku za otvaranje izbornika opcija:
Nova snimka: ako odaberete ovu funkciju, započinje snimanje nove snimke. Tijekom snimanja, pritisnite lijevu softversku tipku za stanku/nastavak snimanja, pritisnite desnu softversku tipku za zaustavljanje snimanja, na zaslonu će se pojaviti upit želite li spremiti snimku, pritisnite lijevu softversku tipku za spremanje i povratak na zaslon snimanja, pritisnite desnu softversku tipku ako ne želite spremiti snimku i izravan povratak na zaslon snimanja.
Pokreni*: Preslušavanje trenutne snimke.
Preimenuj*: Promjena naziva datoteke trenutne snimke
Izbriši*: Brisanje trenutne snimke.
Popis: Prikaz popisa datoteka snimki
Postavke: Možete odabrati mjesto spremanja i kvalitetu zvuka.
Koristi kao*: Možete postaviti trenutnu snimku kao zvuk zvona dolaznog poziva.
Pošalji*: Možete poslati trenutnu snimku putem MMS poruke.

8.7 FM radio

Vaš telefon ima ugrađen FM radio. Pristup ovoj funkciji

moguć je samo kada su na telefon priključene slušalice jer njihova žica služi kao antena za radio.
U sučelju FM radija, pritisnite navigacijsku tipku dolje za otvaranje/zatvaranje FM radija. Pritisnite navigacijsku tipku gore za otvaranje/zatvaranje funkcije automatskog traženja radiopostaja. Ako je ova funkcija aktivna, pritisnite navigacijsku tipku lijevo/desno za pomicanje naprijed/natrag dok ne pronađete radiopostaju. Ako je funkcija automatskog traženja isključena, ručno možete tražiti željenu radiopostaju, pritisnite navigacijsku tipku lijevo/desno za pomicanje naprijed/natrag po frekvencijskom području u koracima od 0,1 MHz. Pritisnite tipku */# za prilagodbu glasnoće. Pritisnite desnu softversku tipku ili crvenu tipku za izlazak iz FM radija, a FM radio svira u pozadini.
Pritisnite lijevu softversku tipku za otvaranje izbornika opcija:
Popis stanica: Prikaz popisa stanica
Ručni unos: Ručno upišite željenu frekvenciju i FM radio automatski će prijeći na tu frekvenciju.
Automatsko traženje: Automatsko traženje i spremanje radijskih stanica
Postavke:
Pozadinsko sviranje: Ako odaberete ovu funkciju, telefon se vraća u stanje čekanja, a FM radio svira u pozadini.
Zvučnik: Otvorite/zatvorite ovu funkciju, a zvuk s FM radija svirat će na zvučniku/slušalicama.
Napomena: Na kvalitetu prijema FM radija utječe okruženje u kojem se nalazite, npr. u prostorima gdje je signal radiopostaja slab ili ometan. U takvim slučajevima, prijem FM radija možete poboljšati ako

stanete bliže prozoru, prilagodite žice slušalica ili ručno namjestite frekvenciju željene radiopostaje

9. Upravitelj datoteka

Upravitelj datoteka omogućava vam rad s datotekama spremljenim u telefon i na memorijsku karticu. Označite datoteku ili mapu i pritisnite lijevu softversku tipku da biste otvorili [**Opcije**] i na raspolaganju vam je sljedeće:

- Otvori: otvaranje datoteke ili mape.

- Nova mapa: izrada nove mape.

- Preimenuj: promjena naziva označene mape.

- Izbriši: brisanje označene datoteke ili mape.

- Pojedinosti: prikaz pojedinosti mape ili datoteke.

-Koristi kao: ovisno o formatu, datoteka se može upotrijebiti kao zvuk zvona, pozadina itd.

- Traži: funkcija pretraživanja datoteka.

- Razvrstaj prema: poredavanje datoteka po nazivu, veličini, vrsti ili ništa od toga.

- Pošalji: slanje označene datoteke u MMS poruci.

- Kopiraj: kopiranje označene datoteku u druge mape.

- Premjesti: premještanje označene datoteke u druge mape.

- Izbriši sve datoteke: brisanje svih datoteka u mapi.

Napomena:

Memorijska kartica zadano je mjesto spremanja, a da biste upotrebljavali multimedijske mogućnosti, datoteke kopirajte u odgovarajuće mape Moja glazba, Fotografije, Video (ovisno o vrsti datoteke).

10. Organizator

10.1 Svjetiljka

U sučelju svjetiljke, možete uključiti ili isključiti ugrađenu svjetiljku.

U stanju čekanja, dugim pritiskom na tipku 0 brzo možete uključiti ili isključiti svjetiljku.

10.2 Alarm

Telefon možete upotrebljavati kao sat s alarmom, a ta funkcija omogućava da u zadano vrijeme telefon zazvoni ili vibrira.

Ako je alarm uključen, simbol alarma prikazan je na vrhu zaslona.

Kada se alarm oglasi, pritisnite lijevu softversku tipku za isključivanje alarma, pritisnite desnu softversku tipku za postavljanje alarma u način drijemanja.

Dostupno je nekoliko alarma, a alarm radi i kada je telefon isključen ili u nečujnom načinu rada.

Označite bilo koji alarm, pritisnite lijevu softversku tipku ili tipku OK za sljedeće:

- možete uključiti ili isključiti označeni alarm
- postavljenje vremena alarma
- možete odabrati ponavljajući alarm, tj. da se alarm oglašava u zadano vrijeme u određeni dan, tjedan ili odabrati neke dane ovisno o svojim potrebama
- odaberite opciju da vas alarm podsjeti zvučnim signalom u zadano vrijeme
- možete namjestiti vrijeme drijemanja
- možete odabrati da se alarm oglasi u zadano vrijeme na sljedeće načine: zvono i vibriranje, zvono, vibriranje

Namjestite željene vrijednosti, pritisnite desnu softversku tipku za spremanje i izlaz.

10.3 Kalkulator

U sučelju kalkulatora, na raspolaganju je sljedeće:
Pritisnite brojčane tipke 0 - 9 za upisivanje broja s kojim želite računati,
Pritisnite odgovarajuću navigacijsku tipku za odabir računske operacije zbrajanje, oduzimanje, množenje ili dijeljenje kako je prikazano na zaslonu
Pritisnite tipku # za upisivanje decimalnog zareza.
Pritisnite desnu softversku tipku za brisanje zadnjeg unosa ili rezultata
Pritisnite lijevu softversku tipku ili tipku OK za prikaz rezultata.

10.4 Kalendar

Kada otvorite kalendar, na zaslonu će se prikazati mjesečni prikaz, a trenutni datum bit će posebno označen kvadratićem. Pritisnite navigacijsku tipku za odabir datuma i kalendarske informacije na zaslonu automatski će se ažurirati sukladno vašem odabiru.
Odaberite bilo koji datum i pritisnite lijevu softversku tipku za sljedeće opcije:

Prikaži: Prikaz detalja odabranog događaja i mogućnost njegovog ponovnog uređivanja

Prikaži sve: Prikaz svih događaja

Dodaj događaj: Izrada kalendarskog događaja i podsjetnika, a zadano vrijeme je datum koji je označen u kalendaru.

Izbriši događaj: Brisanje događaja u kalendaru

Skoči na datum: Skok na odabrani datum.

Skoči na danas: Skok na današnji datum

Idi na tjedni/mjesečni prikaz: Odabir tjednog ili mjesečnog prikaza kalendara.

10.5 Štoperica

Ovaj telefon ima i ugrađenu običnu i višestruku (NWay) štopericu.

10.6 Svjetski sat

U ovom izborniku, pritisnite navigacijsku tipku lijevo/desno za odabir nekih gradova širom svijeta i prikaz njihovog lokalnog vremena u odnosu na trenutno vrijeme na telefonu.

10.7 Pretvarač valuta

Otvorite sučelje pretvarača valuta, najprije upišite tečaj, pritisnite navigacijsku tipku lijevo/desno za odabir odnosi li se tečaj na domaća u stranu valutu ili obratno, pritisnite navigacijsku tipku gore/dolje za prebacivanje na polje za upisivanje iznosa domaće valute, pritisnite lijevu softversku tipku za pretvorbu i prikaz rezultata pretvorbe.

11. Usluge

Vaš telefon ima i internetski preglednik koji vam omogućava mobilno pregledavanje sadržaja na internetu i upotrebu određenih internetskih usluga.

Napomene:

1. Vaš davatelj internetskih usluga (ISP) možda ne podržava neke mogućnosti, a da bi se osigurao normalan rad preglednika, vaša pretplata i SIM kartica moraju podržavati internetski pristup.

2. Tijekom pregledavanja interneta mogu nastati troškovi zbog podatkovnog prometa, a više informacija o mogućnostima internetskog pristupa i troškovima zatražite od svojega mrežnog operatora.

11.1 Početna stranica

Ovdje definirate početnu internetsku (WAP) stranicu koja će se prikazati kad pokrenete preglednik, a ako ne namjestite svoju početnu stranicu, upotrijebit će se prethodno određena ili zadana početna stranica.

11.2 avoriti

U ovom je izborniku popis vaših omiljenih internetskih stranica (favorita) i tu možete dodati i spremiti nazive i adrese internetskih stranica koje često posjećujete da biste im mogli brzo pristupiti.

11.3 Upisati adresu

Ovdje možete ručno upisati adresu internetske (WAP) stranice kojoj želite pristupiti.

11.4 Nedavne stranice

Popis internetskih stranica koje ste nedavno posjetili i kojima možete ponovno pristupiti tako da odaberete željenu stranicu, a možete i izbrisati stranice s popisa.

11.5 ostavke

Početna stranica: Odaberite korisnički definiranu ili zadanu početnu stranicu.

Podatkovni račun: Postavite podatkovni račun koji odgovara SIM kartici.

Opcije preglednika: Obrišite kolačiće i internetske informacije spremljene u predmemoriju, a dobro je to povremeno učiniti da biste izbjegli zagušenje i postigli veću brzinu pregledavanja interneta.

Osobne postavke: Namjestite odgovarajuće postavke uključujući prikaz vremena, prikaz slika, predmemoriju i kolačiće.

12. Zabava i igre

Telefon ima i dvije klasične igre.
Pročitajte upute za igru za informacije kako igrati.

13. Način unosa

Ovaj telefon podržava nekoliko različitih načina unosa teksta koje možete upotrebljavati kad upisujete informacije, uređujete poruke i dodajete kontakte u telefonski imenik.

Upotrijebite tipku # za prebacivanje između različitih načina unosa.

Tijekom uređivanja teksta, na raspolaganju su vam sljedeće kontrole:

Lijeva softverska tipka: Općenito služi za potvrdu.

Desna softverska tipka: Pritisnite za brisanje jednog znaka, dugo pritisnite za brisanje svega.

Tipka Kraj/Uključivanje: Povratak na zaslon stanja čekanja.

Tipka [*]: U načinu unosa, pritisnite ovu tipku za interpunkcijske znakove i popis simbola.

ABC (abc) način unosa

Svakom tipkom možete upisati nekoliko različitih znakova. Uzastopno pritiskajte odgovarajuću tipku dok se ne pojavi željeni znak.

Kada trebate upisati interpunkcijski znak i neke posebne znakove, pritisnite tipku [*] za prikaz popisa posebnih znakova

Pritisnite tipku [0] za upisivanje jednog praznog mjesta.

Hi način unosa

To je Hindi unos, a svaka tipka služi za upisivanje nekoliko znakova. Tipke rade na sličan način kao kod ABC načina unosa.

Numerički način unosa

Za upisivanje brojeva, pritisnite odgovarajuće brojčane tipke.

14. Održavanje telefona

Mobilni telefon napredan je elektronički proizvod i stoga ga treba pažljivo upotrebljavati i održavati. Sljedeći savjeti mogu vam pomoći u ispravnom održavanju telefona kako biste produžili njegov životni vijek:

- Telefon i dodatnu opremu odlažite na mjesta izvan dosega djece.
- Držite uređaj suhim. Kiša, para ili vlaga uzrokovat će hrđanje kontakata i elektroničke pločice. Ako telefon slučajno smočite, izvadite bateriju i telefon pošaljite u ovlašteni servisni centar na obradu.
- Nemojte ostavljati telefon na prašnjava mjesta jer to može utjecati na normalnu uporabu telefona.
- LCD zaslon i drugi dijelovi mobilnog telefona mogu se lako oštetiti ako mobilni telefon padne ili bude izložen jakim vibracijama; nemojte oštrim predmetima dodirivati zaslon telefona.
- Nemojte telefon izlagati previsokim temperaturama. Visoke temperature mogu skratiti životni vijek elektroničkih uređaja, oštetiti baterije i deformirati plastično kućište telefona.
- Nemojte telefon izlagati preniskim temperaturama jer, kad telefon bude na normalnoj temperaturi, uslijed kondenzacije u telefonu se može stvoriti vlaga koja bi mogla oštetiti elektroničke sklopove telefona.
- Nemojte bacati, udarati ili pretjerano tresti telefon da ne biste oštetili elektroničke sklopove i kućište telefona.
- Nemojte upotrebljavati kemikalije, otapala za čišćenje ili jake deterdžente za čišćenje uređaja, upotrebljavajte samo u sapunicu blago navlažene krpice i nježno trljajte.
- Nemojte bojati telefon kako ne bi zaglavili pokretni

dijelovi što će onemogućiti normalan rad.
- Upotrebljavate mekanu krpicu za čišćenje leće fotoaparata.
- Upotrebljavajte samo priloženu ili od proizvođača predviđenu antenu. Upotreba antena, dodatne opreme ili preinake na uređaju koje nisu odobrene od strane proizvođača mogu oštetiti uređaj, poništiti jamstvo i kršiti primijenjene propise koji se odnose na radiokomunikacijske uređaje.

15. Dodatna oprema

S ovim uređajem upotrebljavajte samo baterije, punjače i dodatnu opremu koju je odobrio proizvođač ovoga uređaja. Upotreba bilo kojih drugih tipova opreme može biti opasna i može poništiti jamstvo. Informacije o dostupnoj dodatnoj opremi zatražite od distributera. Dodatno možete kupiti:

Dodatna baterija

Kod nas ili naših distributera dostupne su dodatne baterije različitih kapaciteta.

Priključak punjača, kabel punjača

Priključak punjača upotrebljava se za povezivanje s kabelom punjača za punjenje preko strujne utičnice. Kabel punjača možete upotrijebiti i za povezivanje s drugim uređajima kao što su osobna računala za punjenje telefona.

Punjenje traje oko 2 do 3 sata. Status punjenja prikazan je na zaslonu. Telefon možete upotrebljavati tijekom punjenja.

Slušalice

Male i praktične slušalice možete upotrebljavati za razgovor uz slobodne ruke (handsfree način rada); tipka na slušalicama služi ja javljanje na poziv i završetak poziva. Neki modeli mogu imati i tipke za prilagođavanje glasnoće.

Tijekom upućivanja ili primanja poziva, nemojte ukopčavati ili iskopčavati slušalice.

Prilagodite zvono dolaznog poziva na ugodnu glasnoću prije nego što stavite slušalice.

16. Ekološke napomene

Pakiranje

Da biste omogućili recikliranje materijala za pakiranje, poštujte lokalne propise o načinu odlaganja ove vrste otpada.

Baterije

Istrošene baterije moraju se odlagati na za to predviđena mjesta.

Proizvod

Znak prekrižene kante za smeće koji se nalazi na ovom proizvodu znači da on pripada obitelji električne i elektroničke opreme.

Da bi se potaknulo recikliranje i obnavljanje otpadne električne i elektroničke opreme (WEEE) i istodobno čuvalo okoliš, europski propisi zahtijevaju da poštujete lokalne propise o razvrstavanju ove vrste otpada.

17. Tehnički podaci

Težina: 67 g (uključujući bateriju i poklopac baterije) Dimenzije: 46 x 107 x 14,4 mm

Baterija: Litij-ionska, 3,7 V

GSM mreže: GSM850 MHz/DCS1900 MHz

Kapacitet baterije: 1000 mAh

Vrijeme razgovora: oko 3,2 sata

Vrijeme na čekanju: oko 245 sati

Napomena: Stvarna radna svojstva ovise o postavkama GSM mreže, SIM kartici i načinu na koji se upotrebljava mobilni telefon.

Upozorenje: Proizvođač ni na koji način i ni u kojoj mjeri nije odgovoran za bilo kakve posljedice nastale zbog pogrešne uporabe, zlouporabe ili nepridržavanja nekih ili svih gore navedenih prijedloga i uputa.

Obavijest: Proizvođač zadržava pravo promjene ili nadogradnje tehničkih svojstava ili verzija softvera uređaja bez prethodne ili posebne najave. Trgovački znaci upotrijebljeni u ovom dokumentu pripadaju njihovim vlasnicima.

TELE2

ENG

User manual

Tele2fon f1

CE 0682

Table of Contents

Mobile Appearance picture 61
1. Foreword 62
2. Quick start.....65
2.1 Icon Explain 65
2.2 Knowing the Keys 66
2.3 Install SIM card 67
2.4 Install T-flash card 67
2.5 Install Battery 68
2.6 Battery Charging 68
2.7 Switching on/off 69
3. Call function.....70
3.1 Dialing telephone 70
3.2 Receiving telephone 71
3.3 call in the menu 71
4. Messages 73
4.1 Write message 73
4.2 Inbox 75
4.3 Drafts 76
4.4 Outbox 76
4.5 Sent messages 76
4.6 Delete messages 76
4.7 Broadcastmessages 76
4.8 Message settings 76

5. Phonebook 79
5.1 Quick search 79
5.3 Add new contact 80
6. Call Center 81
6.1 Call history 81
6.2 Call settings 82
7. Settings 85
7.1 Phone settings 85
7.2 User profiles 87
7.3 Network settings 88
7.4 Security Settings 88
7.5 Connectivity 91
7.6 Restore factory settings 91
7.7 Sound effects 92
8. Multimedia 93
8.2 Image viewer 94
8.3 Video recorder 94
8.4 Video player 95
8.5 Audio player 96
8.6 Sound recorder 96
8.7 FM radio 97
9. File manager 99
10. Oragnizer 100
10.1 Flashlight 100
10.2 Alarm 100

10.3 Calculator 101
10.4 Calendar 101
10.5 Stopwatch 102
10.6 World clock 102
10.7 Currency converter 102
11. Services 103
11.1 Homepage 103
11.2 Bookmarks 103
11.3 Input address 103
11.4 Recent pages 103
11.5 Settings 104
12. Fun&Games 105
13. Input methods 106
14. Phone maintenance 107
15. Accessories 109
16. Environment 110
17. Technical Specifications 111

Mobile Appearance picture

1. Foreword

Honorific mobile phones user, thank you for choosing our mobile phone!

Our cellular phones is according with the communication industry standards of PRC, and also according with the standards of European, and are approved for GSM networks.

Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network. Please contact your service provider for more information.

We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool…). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower

than - 10°C and higher than + 55°C.
The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.
Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).
Electrical safety
Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.
Aircraft safety
When traveling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.
Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.
Explosive materials
Please comply with warning signs at petrol station when personnel asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.
Electronic equipment
To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.
Electronic medical equipment
Your phone is a radio transmitter which may interfere with

electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used

As follows:

·Against the ear: place or receive a phone call and hold the phone as you would a wire line telephone.

·Body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 2.5 cm form your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 2.5 cm from your body,

·Data operation: when using a data feature, position the phone a minimum of 2.5 cm from your body for the whole duration of the data transmission.

2. Quick start

2.1 Icon Explain

Icon	Function description
	Network signal strength: number of the more stronger the signal;
	SIM card number of the more power the more full
	Battery capacity number of the more power the more full;
	SMS
	Missed call SIM has missed calls
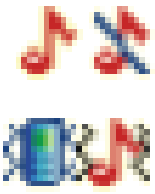	**Used profiles** Different icons show different icon: General, Silent, Metting, Outdoor
	Headset Plug in headset

	Alarm Alarm function opened
	Stopwatch Stopwatch function turn on
	Key lock Show key and screen lock

2.2 Knowing the Keys

1. Left soft key/Right soft key: Implement the functions shown in the lower left/right hand corner.

2.Green key: Press after dialing to connect by SIM Card. Press if there is an incoming call to answer. Press from standby to go to call records list.

3. Red key: Long press to switch phone on/off; Press to end, reject call; or to exit a menu.

4. OK key: Confirm or accept selection in menu access.
Press from standby to enter the selected shortcuts list function.

5. Navigation Keys: Press the up/down/left/right direction in menu to scroll, browse or in edit page to move cursor. In idle mode, press the up/down/left/right direction keys to select the shortcut function showed on the bottom of the screen, and then press the OK key to confirm.

6. 0-9 alphanumeric keys: Press corresponding keys to input

numbers when dialing or numbers and characters when editing.

7.*(Star) Key: Press in standby to input "*" character; long press from standby to input +/P/W.

In the idle screen, press the left soft key, then press the * key to lock or unlock keypad.

8. # Key: Press in standby to input "#" character; long press from standby to activate or deactivate silent mode

2.3 Install SIM card

This phone supports two GSM SIM cards. Find SIM card's groove in the back of the phone and slide it completely there. During installation, please make sure the chip is facing downwards and pay attention to slot direction.

Note:

1. Keep SIM card out of children's touch.

2. Any abrasion or folding could easily damage SIM card, so please be extremely careful when you insert, Remove and preserve it.

3. Please make sure that you have cut off the power supply and have taken out battery before you remove SIM card.

2.4 Install T-flash card

1. First switch off the phone and remove the battery.

2. Push the metal card holder toward the bottom of the phone and lift the released end of the holder.

3. Place the memory card into the holder with the metal contacts face down and push the holder until it locks into place.

Note:

1.To avoid damaging memory card, please do not

plug memory card fast or frequently.

2. Please regularly backup information in the cards on other equipment when you use Cards like T-flash! Improper use or other uncertain factors may cause the damage or loss to the content in the cards.

2.5 Install Battery

Align the battery chip with the metallic salient point in battery jar, insert the battery until it is inserted into the battery jar. Slide battery cover into back of the phone until it is locked.

2.6 Battery Charging

Unclose dustproof soft gum of attachment mode on the bottom of the phone, insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet, Screen will display the charging sign. After charging is finished, just pull out the plug.

Note:

1. Please use the standard battery and charger, or may explode.

2. If the battery is completely discharged, the battery icon should be in charge after 2 to 3 minutes to appear. Generally based on the current state of the phone (if boot, call, etc.) of different charging time for 2 to 5 hours.

3. Please use the charger, charging as much as possible to avoid using USB cable.

4. To ensure optimal battery performance, the completion of two to three times the battery charge and discharge cycles. Several new battery initial charge, please charge more than 10 hours straight.

2.7 Switching on/off

Long press **the Red key** to switch your phone on or off.

1. If there is no SIM card, SIM card is defective, or SIM card contact is loose, you will be prompt with a warning after powering on, shut down and check your SIM and its installation.
2. If inserted one GSM SIM card only into the phone, meanwhile phone code and PIN code is turn on. When switched on, after entering the PIN code and phone code, the phone enter the standby mode by the current SIM.
3. If inserted two GSM SIM cards, meanwhile phone code, PIN1 code and PIN2 code are all turned on. When switched on, you will be prompted to enter the code one by one. After switched on, the phone will automatically search the network.
4. If the phone detected authorized network, the screen will display network name and signal strength; If there is no authorized network is found, the phone can only make emergency calls or use non-communications features.

3. Call function

3.1 Dialing telephone

1. Direct dial

In standby mode, press the corresponding numeric keys to enter the phone number that you want to dial, including necessary area codes. Short Press the Right soft key [Clear] to delete one character, and Long Press delete all inputs, if inserted only one SIM card, press the Green key to select SIM card dial.

2. Making an International Call:

To make an international call, long press * key until the prefix symbol "+" of international call displays in screen.

3. Dialing from Phonebook

Enter the Phonebook via the menu, use the Up/Down Navigation keys to scroll to the desired contact, or press the first letter of the name of the desired contact as saved in your phonebook for quick access to names beginning with the letter then scroll to the desired, press the green key to select SIM card dial.

4. Dialing from Call history

Enter the Call center (press the Green key from standby or via the menu), use the Up/ Down navigation keys to scroll to the desired contact, press the green key to select SIM card dial.

5. Dial emergency service

You can directly dial the emergency service number without SIM card. Different networks use different urgency service numbers, so for details please inquire the network operation company.

3.2 Receiving telephone

When there is an incoming call, the phone will give corresponding alert, if your network supports caller ID, the screen will display caller's name or number (depending on whether there is information of the caller in your phonebook).

1. Press the green key or press the Left soft key and confirm [options] to answer the incoming call.
2. If function of [call center/call setting/Advanced setting/ Answer mode] is selected as [Any-key], press the any key to answer the incoming call except the Right soft key or the Red key.
3. If you do not want to answer an incoming call, press the Red key or the Right soft key [Reject] to reject it.
You can also press the Red key to end a call.
4. During a call, you can press the Up/Down navigator key to adjust receiver volume.

3.3 call in the menu

During a call, press the right soft key can also open / close the hands-free function, press the left soft-key into the options:

- Swap*: Is maintained in the current call and switch between calls

- Conference*:Into the multi-party conference call, you can follow the prompts to answer the waiting call, to add multi-session conference call will be maintained; and the party conference in private conversation, the call to keep all other parties; the parties to keep the party; the end of the current Calls and all calls remain.

- Hold/Retrieve single call*: The current call on hold or resume the call

- **End single call*:** end off the current call.

- End all calls*: end off the current call and the hold call
- Transfer*: the function need network support.
- **New call:** enter the dial-up interfaces.
- Phonebook: enter the phonebook list of interfaces.
- Messages: access to the message menu.
- Call history: access to call history list.
- Sound recorder: record the current call.
Note:
Recording of the call, in some countries is illegal. Therefore, when you talk to Recording, should seek prior approval from the other party's consent.
- Mute: mute on or off, open the case in the quiet do not send local voice.
-**DTMF:**The dual tone multi-frequency switching operation (a call, you press the keys on the keyboard, the audio signal will be sent to each other, for telephone banking, automatic answering machine, etc.)
Note:
***Denotes menu items only appear in specific circumstances.**
Such as: [Swap] exist only in the state of the phone and call the phone only appears to be suspended. At the same time for the conferencing, you need to the appropriate service provider to subscribe.

4. Messages

Message service is a network dependent function, which allows you to send, receive and edit all kinds of messages. Please contact the network operator for more details.

4.1 Write message

4.1.1 Text message

Edit a new message, save or send it to the recipient.

Note:

to send SMS, you need to set the correct SMS service center number which can be obtained from network provider.

While editing, press the # key to change input method, a text message can be up to 612 characters in length.

Press the OK Key, into add recipient interface, you can enter number and add from phonebook, you can add one number or more number, press the Left Soft key [Options] to select options when editing:

- Send: Enter the destination number is sent, or press <confirm> into the address book to find the necessary records, you can select the type of SIM card, confirmed, you can send.

- **Edit recipient:** you can edit recipient number.

- Remove recipient: you can remove one recipient.

- Remove all recipients: you can remove all recipients

- Save to drafts: Save the edited message to the Drafts box

4.1.2 Multimedia message

It's multimedia information, with the information service, you can use the phone to send or receive text content. Including color pictures, animation and music can be sent by MMS to each other or receive their own phone.

Note:
To use this feature only when the network operator is supported. And only those that with compatible MMS-enabled mobile phone can receive and display properly.

Into the editing interface, press left soft key to option:

-send to:you can enter number and add from phonebook, you can add one number or more number, after number edit, you can also remove number, change to CC or change to BCC.

-Input method: You can select input method, or insert symbol.

-Add picture: Insert picture in phone or memory card to MMS.

-Picture options*: can remove the current picture.

-Add sound: Insert audio file in phone or memory card to MMS.

-Sound options*: can remove the current sound

-Add video: Insert video file in phone or memory card to MMS.

-Video options*: can remove the current video

-Add subject:add MMS subject

-Preview MMS: Preview each page in turn.

-Slide options: Under this option adder to the next page, add the page to the previous page and set the slide timing.

-Advanced: can select insert attachment and insert bookmark option

-Save to Drafts: Save the MMS to the [Drafts], re-edit or send.

4.2 Inbox

Received SMS/MMS messages can be stored either in phone or in SIM memory, and are accessed here. When you have received a message, the tones or vibration to alert you and message mark will also be shown on the screen. Press the Left soft key [Read] or the OK key to read the new message, press the Right soft key [Back] to return, and you can also access the inbox to read the new message.

If the message memory is full, the indication “Memory full” and the message icon will be shown on the screen and flashed. Before you can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox, the information will be lost and incomplete.

In message list, press the OK key to read the selected message, press the Left soft key [Options] to make the following menu:

-View: view the current message

-Reply by SMS: Reply SMS to the message sender directly.

-Reply by MMS: Reply MMS to the message sender directly.

-Call Sender: Select to call the sender number

-Forward: forward the current message to other number.

-Delete: Delete the messages.

-Delete all: delete all messages in inbox.

-Save to phonebook: Save the information in the sender number to the phonebook.

4.3Drafts

Not send SMS and MMS, will be stored in the mail within, the operation is the same with inbox

4.4 Outbox

Failed to send SMS and MMS, will be stored in the mail within, the operation is the same with inbox.

4.5 Sent messages

If SMS or MMS is sent successfully, then be stored in the letter box. Automatically save messages need to select in [Message Settings →Text message →Message setting →common settings→save sent message], other operation is the same with inbox.

4.6 Delete messages

In this feature, you can choose to delete a single mailbox, you can also choose to delete all mailbox information.

4.7 Broadcastmessages

Broadcast message is sent by network operators, public information, this function needs the network operator support, please contact the network operator. Using the cell broadcast service, you can receive from the network operator information on various topics, such as weather, taxis, hospitals and so on. For information on available topics, please consult your local network operator.

4.8 Message settings

4.8.1 Text messages

Profile settings: You can choose either of two modes, custom different parameters, including the model name, short message center number, Validity period and

Message type.

Voicemail server: When you can not answer the phone, automatically incoming calls to voice mail number, you can let the other party to your message, a message stored in the network's voice mail system, and afterwards, you can access the voice mail system to listen to a message.

Into the voice mail sub-menu, you can see the current voice message (up to the establishment of two voice mail)

Voice mail function needs the support of network operator, you may need to subscribe to the service. For details, please contact with the operator.

Common settings:

Delivery report: Open the function, after a successful send text messages, the system will return to report.

Reply path: If the network allows, open the function, the recipient receives a text message, the system will send a confirmation message.

Save sent message: open the function, After the success of SMS will be automatically saved in the Outbox.

Memory status: can view the memory storage status.

Preferred storage: you can choose to give priority to messages stored in SIM card or mobile phone.

Preferred connection: You can select prefer connection: GPRS or GSM.

4.8.2 Multimedia message

Data account: Internet access account settings.

Common settings:

Compose: In the menu, you can set slide time, creation mode, signature set act.

Sending

Delivery report: Select [On], when the recipient receives and download, the network will send a message to notify you (subject to network support); You can also choose [Off]

Read report: Select [On], then when the recipient read the MMS, you can choose to read the report sent to you(need network support), you can also choose [Off].

Priority: Priority Setting MMS.

Delivery time: you can set delivery time,immediate\1 hour later\12 hours later\24 hours later.

Send and save: open the function, After the success of MMS will be automatically saved in the Outbox.

Retrieval: In the menu, you can set home network\Roaming\Filters\Read report\Delivery report

Preferred storage: you can select preferred storage as phone or memory card.

Memory status: you can select phone or memory card to view Used status.

4.8.3 Service messages

Enable push: you can select accept all push messages or disable.

Enable service loading: you can select prompt, Auto launch or disable.

5. Phonebook

The Phone for your well-prepared high-capacity phone storage space. You can use the phone's contacts feature to save the contact name, number and caller ring-tone. The phone can save 500 phone book records, SIM card number of records stored phone numbers vary because of their capacity.

5.1 Quick search

In order to facilitate you to quickly search the phone book to the desired number, the phone prompts you to quickly find features.

In the contact list interface, you press # key to switch input method, enter the contact name of the first characters to locate search.

After searching for the name, press the Green key to dial the number and press the Red key to end dialing.

5.2 Browse contacts

In the phonebook list screen, press the up / down navigation key to select the contact record, press the green key to dial the number in the record, then the red key to end the dialing. Press the OK Key to display the details of the selected record. In the phonebook list screen, select either the phonebook record, press the left key to perform the following operation:

- View: view the select

- send text message: send SMS to the select number

-send multimedia message: send MMS to the select number.

- Call: call the select number

- **Edit:** you can edit the select record

- Delete: Delete the select record

- Copy: this record can copy to “SIM” or “phone”

- Move: this record can move from SIM to phone, or move from phone to SIM

- Add to Blacklist: this record can add to blacklist.

- Phonebook settings:

Speed dial: Add this number to the fast dial list. Set the speed dial feature, in standby mode press the corresponding number key, you can directly dial the number key corresponding to the speed dial number.

Extra numbers: set this number to own number

Memory Status: Query "SIM" or "phone" memory Phonebook using status

Copy contacts: copy all contacts from phone to SIM, or from SIM to phone.

Move contacts: move all contacts from phone to SIM, or from SIM to phone

Delete all contacts: delete all SIM contacts or delete all phone contacts

5.3 Add new contact

-SIM: New records added to the SIM, each name can only be stored under a number.

-Phone: you can input name, number and set caller ring-tone. This Records stored in your phone,**.**

6. Call Center

This phone can record all answered, dialed and missed calls as well as their call time. Only when related function is supported by network and phone is switched on and in network service area, it can record the answered and missed calls. Call records may be accessed by pressing the Green key from standby or accessing through the menu.

Access the Call Center menu using the normal menu path, the submenus are as follow:

6.1 Call history

Missed/Dialled/Received calls

Display list of missed/dialled/received calls.

Once on the call records list, press the Green key to make a call; press the OK key to view the details of current call record; press the left soft key to make the following:

- View: View the details of current call record.

- Call: call current record.

- send text message: send SMS to the select number

-send multimedia message: send MMS to the select number.

- Save to phonebook: Store the number as a phonebook entry.

- Add to blacklist: The phone number is set to refuse to answer the phone, you can set the number after the [call center →call setting →Advanced settings→blacklist] query to

- Edit before call: edit number before the call history

- Delete: Delete the current call record.

Delete call logs

Choose to delete which call log or all call histories.

Call timers

View all time for the Last call\ dialled call\received call time, and you can reset all call timers, but if you can reset, you need input phone password(162991).

SMS counter

View SIM sent and received message quantity.

GPRS counter

View the GPRS data volume on the network.

6.2 Call settings

SIM call settings

Call waiting:

you can choose to Activate, Deactivate or Query status of this feature.

Activate this feature, if you call any other incoming call, the phone beeps, and the screen will display the caller number or name and call waiting information.

Call divert:

This feature allows you to play to your phone calls transferred to your voice mailbox or another phone number you specify. This function needs the support of network operator, please contact the network operator.

Transfer in the following ways, each way can be set to enable, disable, and query status. When turned on, the on-screen prompts to transfer the phone number.

Divert all voice call: Transfer all voice calls to your settings in the phone number or voice mail

Divert if unreachable: When your phone is off or not on the network service area, the transfer of all voice calls to your phone number or set voice mail

Divert if no answer: No answer transfer all voice calls to your phone number or set voice mail

Divert if busy: When the call is busy, the transfer of all

voice calls to your phone number or set voice mail

Divert all data calls: Transfer all the data calls to the phone number you set, this function is supported by the network operator, please contact the network operator.

Cancel all diverts: cancel all call forwarding type.

Call barring:

Set limits each case to answer or dial the phone. Network operators must first apply for international calling features, and limit access network password, to set the limit function.

This function needs the support of network operator, please contact the network operator.

Call restrictions can be set for activate, deactivate and query status

Line switching:

Can switch to Line 1 or Line 2, Line 1 is default, if you choose line 2, then there may be no phone call.

Advanced settings

Blacklist:

You can on or off this feature to edit the blacklist number, up to 20 numbers can be edited. Open the function, the blacklist numbers you call, the other shows you are on the phone, and your phone is in a state of no response.

Auto redial:

You can enable or disable this feature, the feature is turned on, after the dial-up, then if the other party does not answer the phone over a period of time will be automatically re-dial, redial the number up to 10 times, in this period, the user can not call any other phone , to end the re-dial, simply press the right soft key to cancel.

Call time reminder: Can set the prompt type

Off: When the phone call, no minutes of tone.

Single: Select 1-3000 seconds after the prompt enter either of the time, when you call the phone at the time when prompted.
Periodic: Select 30-60 seconds after the input in any one time, when you call for every minute the phone will be reminded of the time.

Auto quick end:

Automatic limit talk time, when the feature is turned on and set a good time, call wait time, the phone will automatically hang up

Answer mode:

Any key: Select the feature, all incoming calls, in addition to the red key and right soft keys, all keys can answer the call

Auto answer when headset mode:Enable this feature, when the phone is in headset mode, there are about 2 seconds after the incoming call, the phone will automatically answer the call.

Auto Call Recording:

You can on or off the function, if you select on, the phone can auto recording when you calling.

7. Settings

7.1 Phone settings

Time and date

Set home city: You can choose a phone provided in the city as the current time zone of your location

Set time/date: Under this you can set the phone to the current date and time. The phone allows you to set the date range of calendar 2000 to 2030.

Set format: Under this you can set the time and date display format

Schedule power on/off

There are four switch time for you to edit, including the following items each time setting the timer on / off, power on / off and timing of the time and so on. When turned on and set to boot, set the time automatically when the power; when turned on and set off, then set the time when you are prompted to shut down.

Note: Time to set the same, can't be activated in order to avoid conflict.

Language

Under this you can choose the language provided by the phone.

Pref. input method

You can set default input method.

Display settings

Wallpaper: The standby interface is used to set the background wallpaper.

You can choose from the built-in wallpaper can also be selected from File Manager image file.

Screen saver

Status: The following can be turned on or off the screen saver function

Waiting: This screen saver can be set to start the waiting time for 5S, 15S, 30S, 1minute

Select Screen Saver: This screen saver can choose the system default can also choose from other document management as a screen saver picture

Show date and time: You can set the idle screen time display on or off.

Show network: You can set the idle screen network on or off.

Shortcuts

This menu can be set more frequently used functions, so you can directly access the most rapid of these features. Quick list of features in the current case, you may be left soft key to enter the Options menu, add a button to enter a list of alternative options, press the up / down navigation key to select your most frequently used functions, press the left or right navigation key to select the order of the feature location.

Dedicated key

You can change navigation keys function corresponding to the shortcut in the idle screen.

Flight mode

This optional mode in which the phone is normal mode or flight mode, flight mode if you choose, the phone can only use some of the functions of non-communications

Misc. settings

Under this function can be press the left or right navigation key to adjust the time on the backlight.

7.2 User profiles

The phone provides you with five profiles: General, Silent, Meeting, Outdoor and My style. It's help you according to the different events and environments in different custom ring tones.

according to different location, choose a different profile, then you only need to personalize your profile and activate.

Note: The factory setting various modes set has been done and has been the general pattern of the default start

Activate

Start the selected profile.

Customize:

You can set all kinds of effects to your own needs. In the Settings screen, press the down navigation key to move the highlight to the item needs to be set.

Alert type: Press the left/right navigation key to select: vibrate only, vibrate and ring, vibrate then ring or ring only.

Ring type: Press the left/right navigation key to select: Repeat, Ascending, Beep once

Incoming call: There are ten built-in ring tones to choose for you, and you may also to choose your favorite audio file as your ring-tone from file management.

Ring-tone volume: Press the left/right navigation key to adjust the ring-tone volume.

Message ring-tone: There are five built-in ring tones to choose for you, and you may also to choose your favorite audio file as your ring-tone from file management.

Message volume: Press the left/right navigation key to adjust the ring-tone volume.

Keypad: Press the left/right navigation key to select click, or tone.

Key-tone volume: Press the left/right navigation key to adjust the key-tone volume.

System alert: You can set whether to open system alert tone.

Reset

Restore the default settings.

7.3 Network settings

Can be set automatically or manually select the network, select Automatic, the phone will be SIM card based on the network where the first selection, select Manual, you need to select the SIM card registered with the network operator can use the same network.

7.4 Security Settings

SIM security

You can use the PIN code, PIN2 code, set the boot password and set security features to protect information security.

PIN password (PIN1) is the SIM card PIN. If the user don't changes the password, the original password is 1234 or 0000. If you enable the boot PIN code, then after each start 4-digit PIN code is necessary to input, PIN code can be amended, to protect their SIM card is not used by others. Note that, if the input PIN code wrong three times, the phone card will automatically lock and unlock prompted to enter PUK code, this time close to the edge of danger, so if unauthorized modification of the PIN code, we must bear in mind.

PUK password (PUK1) from consists of 8 digits, which users can not change. PIN code when the phone is locked, and when prompted enter the PUK password, do not act

rashly, because the PUK code input opportunities is only 10 times and if enter the wrong words for 10 times, SIM card will be permanently locked, that is scrapped. Part of the SIM card PUK code is never used when the user comes with the card, while the other part of the network operators will need to obtain the PIN code if you do not know the PUK code locked, do not random input, then the correct way is to call the SIM card hotline operators, after a simple user data are verified, you can obtain the PUK password to unlock the phone lock, the service is free of charge.

Note: Please use this feature with caution, if forget PUK password, please contact the network operator. If input PUK code in error for 10 times consecutively , SIM card will be scrapped.

PIN lock

Under this you can enable or disable PIN password, PIN code on or off are required to enter the correct PIN password. When open this feature, every time you turn the phone prompts you to enter the PIN password.

Change PIN

If the current PIN password is already open, you can make changes to the PIN password. First enter the old PIN password, after repeated twice to determine and identify new password.

Change PIN2

PIN2(PersonalIdentificationNumber2) password is to enter a particular function (such as setting a fixed number, set the call billing, etc.) to enter the personal identification number.

Pin2 password is provided by suppliers for SIM card to

another password, used to qualify the dial personal identification password, Mainly used to eliminate the call cost information, set the phone calls and the billing currency unit, the cost limit function, limited dial-up ("Security settings "---" limited dial-up" can only be opened after the phone call which can be used to set the number and do not call this). My phone's SIM card predictive value is 12345. Pin2 after input error password 3 will be locked, needed Puk2 to unlock.

PIN2 password is used to set the phone billing. If you enter three times wrong, the phone will need PUK2 unlock password, the process described in the previous PIN password, PUK password the same. However, both the password and network SIM card billing and modify the internal data, it will not open, and even if PIN2 password locked, it will not affect the normal use of mobile phones. Thus PIN2 password, and not to deliberately ignore PUK2 password.

Note:

Please use this feature with caution, If input PUK code in error for 10 times consecutively, SIM card will be scrapped.

Change operation with the PIN1.

Phone Lock

Under this password there you can set the phone to avoid unauthorized use of your mobile phone

Phone lock

Under this you can enable or disable phone password, phone password on or off are required to enter the correct phone password. When open this feature, every time you turn the phone prompts you to enter the phone password.

Change password

You can make changes to the phone password. First enter the old phone password, after repeated twice to determine and identify new password.

Auto keypad lock

Under this you can set the time to open or close the keyboard lock keyboard lock feature. Set the keyboard lock time, the idle screen, mobile phone within the set time the keyboard does not perform any operation, it will be automatically locked, then you can press the # key to unlock.

Note: Keyboard locked and the backlight is off, to be selected button lights up the screen, then press the soft key + the *key to unlock

7.5 Connectivity

Data account

You can choose the Internet account. You can add Internet accounts by yourself.

In the Internet interface, press [Options], you can do operations as followed:

Edit: Edit selected network count.

Add PS account: Mobile support 6 maximum data account. Every account to edit the information: account name, APN, user name, password, auth type, SIM selection, advanced settings etc.

Delete: delete the selected Internet account

Change default: select this function to restore default.

7.6 Restore factory settings

Reset the parameter value mobile phone, make your phone reset to default settings. Please enter a privacy password (initial password is 1234), restore factory settings.

7.7 Sound effects

In this feature, you can set all audio equalizer.

8. Multimedia

8.1 Camera

Your phone is fitted with camera allows you to take photos whenever possible. You can store the pictures in phone or customize the wallpaper.

In the multimedia menu, select the camera into the camera preview screen, press the following keys can be set for the following cameras:

Press “1” key to adjust [Image Size]

Press”2” key to adjust [Image Quality]

Press”4” key to adjust [White balance]

Press”6” key to adjust [Delay timer]

Press”7” key to adjust [Cont. shot]

Press the OK key to take photo, press the right soft key to return, press the left soft key to option:

Photos: select the function into image viewer.

Camera settings: Press the left/right navigation key to adjust the following options, including Shutter sound, Ev, Anti-flicker, Contrast, Delay timer, Cont. shot, Profile that is complete, press the left soft key or the OK key to confirm the current setting.

Image settings: can set the image quality and image size.

White balance: can set white balance

Scene mode: can set the photo mode as auto or night.

Effect settings: can set special effect

Storage: Can choose camera phone or memory card as the storage location

Restore default: select the function and confirmed, the camera parameters can be restored to the default location

After taking pictures, press the back button to return

camera preview screen, press the left soft key to enter options, can take pictures to send or delete

8.2 Image viewer

This feature is convenient for users to view the photos stored in albums, press the OK key to open the picture, press the left soft key to open the option menu:

View: open the current image to view.

Image information: can display the current image information.

Browse style: can set to list style or Matrix style.

Send: Pictures can be selected through the "MMS" method to send.

Use as: The selected picture set to phone wallpaper, Screen saver, power on display, power off display.

Rename: Change the name of the selected picture.

Delete: Delete the select image.

Sort by: Can sort by name, Type, Time, Size, None

Delete all files: Delete all image files.

Storage: Can choose phone or memory card as the storage location

Note:

When no pictures in Image viewer, the options menu only displays the browse style and storage.

8.3 Video recorder

In the multimedia menu, select the video recorder into the video preview screen, Press left/right navigation key to adjust [Exposal bias], Press up/down navigation key to adjust [Focal distance], press “2” key to adjust [video quality], press “3” key to adjust [Night mode], press”4”key to adjust [white balance], press the left soft key into options menu:

Camcorder settings: Press the left/right navigation key to adjust the following options, including EV, Night mode, Anti-flicker.
Video settings: Can set the image quality
White balance: Can set white balance
Effect settings: Can set special effect.
Storage: Can choose camera phone or memory card as the storage location
Restore default: select the function and confirmed, the camera parameters can be restored to the default location.
Press the OK key to start recorder, recording, press the OK key to pause or resume recording; Press the right soft key to stop recording, the screen will be prompted to save video, press the left soft key to save and return to the video preview screen, press the right soft key to not save directly Back to the preview screen.

8.4 Video player

This feature can be played stored in the mobile U disk or video files, supported formats to 3gp, mp4, Avi file player.
In the multimedia menu, select the video player into the video list, press left soft key open the option menu:
Play: Play the current video file
Send: can be selected video through the "MMS.
Rename: Change the name of the selected video.
Delete: Delete the select video.
Delete all files: Delete all video files.
Sort by: Can sort by name, Type, Time, Size, None
Storage: Can choose phone or memory card as the storage location

8.5 Audio player

Play the audio files saved in the phone or memory card.
In playing interface, press the up navigation key to start/pause the current song, press the down navigation key to stop play, press the left/right navigation key to switch previous/next song; press the */# key to adjust the volume,
In playing interface, press the red key or the right soft key to exit player interface, Phone into the background playing mode, while the idle screen shows the name of the music.
Press the left soft key into the play list, play the left soft key into option menu:

Play: play the current song.

Details: can view the current song information, include song size and time.

Refresh list: can refresh the play list.

Settings:

Pre. Play list: Press the left/right navigation key to switch phone or memory card.
List auto gen.: Select this option enabled, each time the player list will automatically update.
Repeat: You can choose play mode repeat all, repeat one or off.
Shuffle: When you select on, the player will not play in order by list.
Background play: Select ON when playing the exit music player can continue playing.
Audio effect: can set sound effect.

8.6 Sound recorder

Enter the recording screen, press the left key into options menu:

New record: when you choose the function, start new record, In recording, press the left soft key to pause/ continue record, press the right soft key to stop record, the screen will be prompted to save video, press the left soft key to save and return to the record screen, press the right soft key to not save and directly Back to the record screen.
Play*: can play the current recording.
Rename*: Change the name of the current recorder file
Delete*: Delete the current recording.
List: Display recorder files list
Settings: you can set storage location and audio quality.
Use as*: You can set the current recorder as coming call ring-tone.
Send*: Can be current recorder through the “MMS” method to send.

8.7 FM radio

FM radio is supported by the phone. Access the function only when you have plugged the earphone.
In FM radio interface, press the down navigation key to open/close FM. press the up navigation key to open/close auto tuning function, when open this feature, press the left / right navigation key to move forward / backward auto search until the search to the channel so far. when close the automatic search function, you can use the manual to search for the channel, press the left / right navigation key to move forward /backward 0.1MHZ. Press the */# key to adjust play volume. Press the right soft key or red key to exit FM radio, and FM plays in the background.
Press the left soft key to the option menu:
Channel list: Display channel list

Manual input: Manual enter frequency to identify, Radio interface automatically skip to the frequency to listen.
Auto search: Can auto search channel and save channel
Settings:
Background play: Phone back to the idle screen after Select the function, FM plays in the background.
Loudspeaker: Open (close) the function, Radio sound will play outside/Handset mode.
Note: Quality of radio subscription is possible influenced by environment like indoor or under shield. You can improve this situation as following: stand closer to the window, adjust the position of earphone line or adjust the channel manually

9. File manager

In document management, you can open files in the Phone or Memory card, you can select file or folder to press the left soft key into [**Options**], you can do the following:

- Open: open the file or folder.

- New Folder: the folder in the selected directory New Folder.

- Rename: you can rename the select folder.

- Delete: delete the selected file or folder.

- Details: View the details of a folder or file.

-Use as: The file can be selected as ring-tones, wallpapers, etc., depending on file format decided

- Search: memory card can be customized to find all the documents.

- Sort by: can "name", “time” "size" "type" or “none”.

- Send: the select file can send by MMS.

- Copy: you can copy the select file to other folders.

- Move: you can move the select file to other folders.

- Delete all files: you can delete all files in the folders.

Note:

Memory card as the default save path, order to facilitate the use of multimedia features, please copy the appropriate files to My Music, Photos, Videos,

10. Oragnizer

10.1 Flashlight

Into the flashlight interface, select on, torch light; select off, torch dark.

On the idle screen, long press the number 0 key, can Torch on or off quickly.

10.2 Alarm

You can use the phone as alarm clock, this feature allows you to set time arrives, make the phone ring or vibrate to remind issue.

When the alarm is turned on state, the alarm symbol is displayed in the top of the screen.

When the alarm clock for reminders, press the left soft key to terminate the alarm reminder, press the right soft key is the alarm clock to sleep.

The phone number of alarm clocks available, both in the off or silent mode, set the alarm clock function has been effective.

Select any of the alarm clock, press the left soft key or OK key to the following:

1, can be turned on or off the selected alarm to open before the alarm clock icon will be displayed

2, set the alarm, reminder time

3, according to the time you need to set the alarm clock to remind the period of a day, week or custom to be reminded of a few days

4, the selected option when the alarm time to remind ring-tone

5, you can set the alarm time to remind the selected mode: ring and vibration, ring, vibration

6, you can set sleep time

Set the required entry, press the right soft key to save and return directly.

10.3 Calculator

Into the calculator, the calculator interface:

Press 0 - 9 numeric keys to enter the number to be calculated,

Press the navigation key to select the location on the screen corresponding to add, subtract, multiply and divide symbols for computing

Press the # key for a decimal point.

Press the right soft key to clear the last bit can be input or the result (no input figures, has withdrawn from the calculator function)

Press the left soft key or the OK button to display the results.

10.4 Calendar

Choose to enter the calendar, the screen will display the system date on the calendar month, and have a background box marked the current date. Press the navigation key to select the date, calendar information on the screen will be updated accordingly.

Select any date, press the left soft key to enter options to the following:

View: View the details of the selected schedule, and re-editing of the operating schedule

View all: view all schedule

Add event: Create a calendar reminder, the default time is the date where the calendar highlights.

Delete event: Delete calendar

Jump to date: Jump the selected date.

Go to today: the date of the input query calendar information

Go to weekly/monthly view: can set the calendar display mode through week or month.

10.5 Stopwatch

The phone provide typical stopwatch and NWay stopwatch use for you.

10.6 World clock

In this menu, press the left / right navigation key to view some cities in the world relative to the current time the phone correspond to time.

10.7 Currency converter

Enter the exchange rate conversion interface, first enter the exchange rate, determined to enter conversion interface, the rate of switching bar, press the left / right navigation key to switch the current exchange rate of the proportional method, that is, the local currency to foreign currency rate or its reciprocal, press the up/down navigation key to switch to local currency field, enter the amount of domestic currency, the press the left soft key, you can display in the foreign currency translation results.

11. Services

The Internet is the combination of wireless communications and Internet application platform that enables you to get rich by phone and ecommerce and other Internet information resources application.

Note:

1. Your ISP may not support some features, in order to ensure the normal operation of the browser, make sure your SIM card is supported and open Internet access.

2. If you browse the web, you need to charge fees related to traffic.

11.1 Homepage

This is the WAP settings you set in the homepage address, if you have no other set will have a direct connection to the phone pre-set or the default home page.

11.2 Bookmarks

In this menu, the display has all the bookmarks in the bookmark, you can add and save you frequently visit the site name and address for future quick access.

11.3 nput address

Enter the need to access the WAP services, and URL addresses, complete, can be connected to the WAP site you want to connect. From the surface in the bookmarks, web history, other than to provide you a flexible way to access the network.

11.4 ecent pages

List of pages you have recently visited records to facilitate your browsing history in selected cases, can directly select [Enter] to access the page, the record could be

deleted.

11.5 ettings

Homepage: Into the function, you can select default homepage or user-defined.

Data account: Into the function, you can set correspond SIM card data account.

Browser options: Clear the temporary buffer information and cookie, it’s can avoid congestion and improve web browsing speed, periodically clear.

Preferences: You can set the appropriate parameters, including the display time, display pictures, cache and cookie.

12. Fun&Games

The phone provides two classic games.
For specific operations, please refer to the directions of the game.

13. Input methods

This phone provides diversified input modes for you to enter letter information when editing SMS and adding phonebook.

Use the # key to switch between different input methods.

When editing the key controls:

The Left soft key: Generally represents confirmation.

The Right soft key: Press to clear one character, long press to clear all.

The End/Power key: Return to the idle screen.

[*] key: In every input status, press this key to call out punctuation and symbol input frame.

ABC (abc) input method

Each key is used to input several characters. Fast and repeatedly press key until your required character appears.

When you need to input English punctuation and some special signs, press the [*] numeric key to call out special sign input box in English input status

Press the [0] key to input blank once.

Hi input method

It’s Hindi input, each key is used to input several characters. key operation similar to the ABC input method.

The Numeric input method

To input numerical values, press the respective numeric keys.

14. Phone maintenance

Mobile is a high-precision electronic products, please carefully maintained. The following suggestions can help you maintain phone, to extend the lifespan:

- Phone and its accessories should be placed out of the reach of children.
- Keep the device dry. Rain, humidity or moisture will corrode the circuit board. If the phone is accidentally flooded, shall promptly remove the battery, and immediately sent to a local authorized service center for processing.
- Do not place your phone in dusty places, this may affect the normal use of mobile phones.
- LCD display is easily damaged cell phone parts, mobile phone dropped onto the ground should be avoided or be strong vibration; prohibit the use of sharp objects to touch the screen.
-Do not place the phone where the temperature is too high. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt plastic shell phone.
- Do not place the phone where the temperature is too low. Otherwise, when the phone temperature to normal temperature, moisture will be generated internally, could damage the device electronic circuit boards.
- Do not drop, knock or severe shaking the phone, so as not to damage the internal circuit boards and precision mobile structure.
- Do not use chemicals, cleaning solvents or strong detergents to clean the device, apply a soft cloth soaked in soapy water and gently scrub.

- Do not use paint pigment cell phone to avoid moving parts and be stuck to proper operation.
- Use a clean soft lens cleaning cloth. Such as: camera lens.
- Replacement antenna, use only the supplied or designated by the antenna. Use of unauthorized antennas, cell phone accessories or modifications, could damage the device and may violate regulations governing radio devices.

15. Accessories

Use only batteries, chargers, and accessories approved by the manufacturer with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

Charger Plug, charger cable

Charger plug used to connect with the charger cable for charging on wall outlets. Also you can use the charger cable to connect with the other devices such as the personal computers to charge the phone.

Charging time is about 2 to 3 hours. The charging condition is displayed on screen. You may use your phone while charging.

Earphone

A mini, practical, hands-free device; you can use its button to answer and end calls. Some models may also come with a volume control knob.

Do not plug or unplug the earphone when connecting dialed or incoming calls.

Please to adjust the incoming call alert volume to the felicitousness before you plug in the earphone.

16. Environment

Packaging

To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

Batteries

Spent batteries must be deposited at the designated collection points.

The product

The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

17. Technical Specifications

Weight: 67g (including the Battery and Battery cover) Dimensions: 46*107*14. 4mm

Battery: Li-ion Battery, 3.7V

Band: GSM850MHz/DCS1900MHz

Battery Capacity: 1000mAh

Talk Time: about 3.2 h

Standby Time: about 245h

Note: Actual operating conditions depend on the local network environment, SIM, and user behavior.

Warning: Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible to any degree.

Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.